



Stainless Steel Accessories for Trucks

KENWORTH

*Proven, reliable and
always innovative.*

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



KENWORTH

STAINLESS STEEL ACCESSORIES



Tested. Reliable. Guaranteed.

Kenworth Truck Accessories

Choosing the right replacement part or service for your vehicle—whether you own one, or a fleet—is one of the most important decisions you can make for your business. And, with tested TRP® parts it's an easy decision.

Regardless of the make you drive, TRP® quality replacement parts are Engineered to fit your truck, trailer or bus. Choose the parts that give you the best value for your business. Check them out at an approved TRP® retailer near you.

The cross reference information in this catalog is based upon data provided by several industry sources and our partners. While every attempt is made to ensure the information presented is accurate, we bear no liability due to incorrect or incomplete information.

Product Availability

Due to export restrictions and market demands, not all products are always available in every location. Check for availability in your area with your local TRP® Distributor.

No part of this marketing material may be reproduced in any manner without written permission from TRP® North America.

TABLE OF CONTENTS

T800/ T600 Accessories

Air Intake Cover.	1-8
Battery/ Toolbox Panels.	1-8
Bug Deflectors.	1-9
Cab Skirts - Day Cab.	1-10
Cab Skirts - Aerocab (2011 & Later)	1-11
Cab Skirts - Aerocab/ Modular (1995 to 2010)	1-12
Engine Air Intake Shroud.	1-13
Fender Guards	
- T600	1-13
- T800	1-14
Grille Bars	1-14
Grille Bezel Trim	1-15
Grille Deflector.	1-15
Sleeper Skirts	1-16
Sunvisor Trim Strip	1-16

T700 Accessories

Bug Deflector.	2-18
Bunk Vent Cover & Bunk Window Trim.	2-18
Cab Skirts	2-19
Door Handle Accent	2-19

TRP® North America

750 Houser Way N.
Renton, WA 98057

www.TRPParts.com

Door Window Accent	2-20
Door Window Bezel Trim	2-20
Extender Skirts	2-21
Headlight Trim	2-21
Hood Latch Guard	2-22
Key Guard Accent	2-22
Kick Plates - Back	2-23
Kick Plates - Front	2-23
Skirting Kits	2-24
Sleeper Skirts	2-24

T680 ACCESSORIES

Bug Deflector	3-26
Cab Skirts	3-26
Door Handle Trim	3-27
Double License Plate Holder	3-27
Fender Light Trim	3-27
Fender Wheel Well Trim	3-28
Headlight Trim	3-28
Kick Plates	3-29
Side Hood Trim	3-29
Skirting Kits	3-30
Sleeper Window Trim	3-30

T440 ACCESSORIES

Air Intake & Logo Trim	4-32
Bug Deflector	4-32
Emblem Accent Trim	4-33

Fender Light Trim	4-33
Fender/ Headlight Trim	4-34

T660 ACCESSORIES

Air Intake & Logo Trim	5-36
Bug Deflector	5-36
Emblem Accent Trim	5-37
Fender Light Trim	5-37
Fender/ Headlight Trim	5-37
Kick Plates	5-38
License Plate Holder	5-39
Scuff Plates	5-39
Sleeper Window Trim	5-40
Skirting Kits - For 62" Sleepers	5-40
Skirting Kits - For 72" Sleepers	5-41
Skirting Kits - For 86" Sleepers	5-42

W900 ACCESSORIES

Battery & Toolbox Cover	6-44
Bug Deflectors	
- Acrylic & Stainless Steel Trim	6-44
- Stainless Steel	6-45
Cab Skirt/ Kick Panel (Pre 2010)	6-45
Cab Skirts	
- Underbody DPF	6-46
- Step DPF	6-47
Center Hood Strip	6-48
Engine Air Intake Shrouds	6-48
Fender Guards	6-49
Grille Bars	6-50

Grille/ Bumper Fill Panels	6-50
Grille Deflectors	6-51
Hood/ Battery Box Filler Panels	6-51
Interior Accessories	6-52
License Plates/ Swing Plates	6-52
Lower Hood Panels	6-53
Mud Flap Reinforcement Bracket	6-53
Sleeper Window Trim	6-53
Skirting Kits	6-54
Tole Hole Covers	6-54

T300/ T370 Acc.

Air Intake & Logo Trim	7-56
Bug Deflector	7-57
Emblem Accent Trim	7-57
Fender/ Headlight Trim	7-58

UNIVERSAL ACCESSORIES

Battery/ Toolbox Covers	8-60
Battery/ Toolbox End Covers & Hangers	8-60
Back Up Light Shields	8-61
Bumper Light Bars	8-61
Bunk Vent Ring & Cover	8-62
Deck Plate	8-62
Door Latch Trim, Surround & Chrome Cover	8-63
Door Top Cap Panels	8-64
Door Window Deflector	8-64
Door Window Shades	8-65

Fender Trim	8-65
Fuel Tank Skirts	8-66
Headlight Visors	8-66
Hood Emblem Accents & Surrounds	8-67
Hood Wing	8-67
Interior Accessories	8-68
License Plates/ Swing Plates	8-68
Light Bars	8-69
Mirror Bracket Replacement Kit	8-69
Passenger Door Window Trim	8-70
Rear Center Light Box	8-70
Rear Frame Covers & Panels	8-71
Rear Sleeper Window Sunvisor	8-71
Revolving Beacon Light Brackets	8-72
Sleeper Extender Rubber & Bracket Covers	8-72
Trailer Service Box	8-73
Under Door Window Trim	8-73
Window Trim	8-74

SLEEPER SKIRTS

38" Sleeper Skirts	9-76
60" & 62" Sleeper Skirts	9-77
72" & 86" Sleeper Skirts	9-78

SUNVISORS

Flat Glass Sunvisors	10-80
Curved Glass Sunvisors - OEM Stainless Steel Replacement	10-81

Curved Glass Sunvisors - OEM Composite
Replacement/ No Sunvisor10-82

AIR CLEANER LIGHT BARS

Air Cleaner Light Bars With X3 Lights
- Pre 2010.11-84
- 2010+11-85

Air Cleaner Light Bars With 2" Round
Lights
- Pre 2010.11-86
- 2010+11-87

Air Cleaner Light Bars With 2" Round Light
Holes
- Pre 2010.11-88
- 2010+11-89

Premium Can Vs. Standard Can11-90

PRODUCT INDEX

All Product Listed Numerically.12-96

TRP® PARTS

TRP® parts for trucks, trailers and buses are available through authorized retailers that include Kenworth, Peterbilt and DAF dealerships around the world. Supported by a worldwide network of parts and service professionals, TRP offers dependable aftermarket products that are designed and tested to exceed customers' expectations for quality and value. Regardless of the age, make or application of the vehicle, TRP is the all-makes answer.

QUALITY AND VALUE FOR ALL MAKES OF TRUCKS, TRAILERS AND BUSES

Drivers and their vehicles—trucks, trailers and buses alike—are constantly being tested. Whether it's the elements, the schedule or the terrain, you must be prepared. The TRP® line of parts and service is engineered to withstand those tests—and exceed them.

TRP is dedicated to providing quality replacement parts for all makes at great value. It's the partnership between tough parts and the roads that test them. It's a focus on extending the life of your vehicle, no matter the make, so you can get the most out of your truck, trailer or bus.

What TRP means to you is confidence. Confidence that you're covered, no matter your make or vehicle. Confidence that the job will get done. And the confidence to take on whatever test may wait around the next turn.



Stainless Steel Accessories for Trucks

1

T800/ T600

*Proven, reliable and
always innovative.*

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



T800/ T600

AIR CLEANER LIGHT BARS - SEE PAGE 11-84 TO 11-88

Please refer to the full Air Cleaner Light Bar section found on Page 11-84 to 11-88.

AIR INTAKE COVERS


Covers existing OEM grille. Attaches using supplied hardware. Fits both T600 and T800 models. Sold individually.



MD0882



MD1444

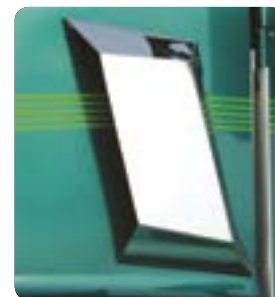

MD1444

Table 1-1: T800/ T600 - Air Intake Covers

Part No.	Description
MD0882	Air Intake Cover, Kenworth T800/ T600 - with Flames
MD1444	Air Intake Cover, Kenworth T800/ T600 - Plain

BATTERY/ TOOLBOX PANELS

Panels designed to bolt on top of factory aluminum checker-plate. Gives a stainless appearance to the lower battery/toolbox area. Ideal for placement of permit stickers. Mounts using supplied hardware. Fits both T800 and W900 models. Sold in pairs.



MD1404

Table 1-2: T800/ T600 - Battery/ Toolbox Panels

Part No.	Description
MD1404	Battery/ Toolbox Panel, 39.5" Long, Kenworth T800/ W900 - Plain
MD1405	Battery/ Toolbox Panel, 45" Long, Kenworth T800/ W900 - Plain

BUG DEFLECTORS

Drilling of mounting holes through hood required. Attaches using supplied hardware. Guaranteed not to break. Bug deflectors available for both the T800 and T600 model. Sold individually.



MD1543



Table 1-3: T800/ T600 - Bug Deflectors

Part No.	Description
MD1544	Bug Deflector, Kenworth T600 - Plain
MD1543	Bug Deflector, Kenworth T800 - Plain
MD3022	Bug Deflector, Kenworth T800 - With Louver
MD4455	Bug Deflector, for Wide Hood Models, Kenworth T800/ C500, 2007 & Later - Plain

CAB SKIRTS - FOR DAY CAB

Designed for T800 models with a Day Cab. Hardware, lights, and harnesses included.
Sold in pairs.



MD3041



MD3039



MD3040



MD5388



MD5390



MD5384



MD5385

T800/ T600 - Cab Skirts For Day Cab Models

Part No.	Description
MD3039	Cab Skirt, Step DPF Only, Standard Cab, Kenworth T800 (Daycab), 2011 & Later - Plain, with Block Heater Cutout
MD3040	Cab Skirt, Step DPF Only, Standard Cab, Kenworth T800 (Daycab), 2011 & Later - X2AG2 Lights (3-count LED), with Block Heater Cutout
MD3041	Cab Skirt, Step DPF Only, Standard Cab, Kenworth T800 (Daycab), 2011 & Later - X2ACG2 Lights (3-count LED), with Block Heater Cutout
MD5388	Cab Skirt, for Dual Exhaust, Split Fender, Kenworth T800 (Day Cab), 2008 & Later - Plain, with Block Heater Cutout
MD5389	Cab Skirt, for Dual Exhaust, Split Fender, Kenworth T800 (Day Cab), 2008 & Later - X3AG2 (6/ 5-count LED), with Block Heater Cutout
MD5390	Cab Skirt, for Dual Exhaust, Split Fender, Kenworth T800 (Day Cab), 2008 & Later - X3ACG2 (6/ 5-count LED), with Block Heater Cutout
MD5391	Cab Skirt, for Dual Exhaust, Split Fender, Kenworth T800 (Day Cab), 2008 & Later - 2" Round Starburst (6/ 5-count LED) with Visor Bezels, with Block Heater Cutout
MD5384	Cab Skirt, for Single Exhaust, Split Fender, Kenworth T800 (Day Cab), 2008 & Later - Plain, with Block Heater Cutout
MD5385	Cab Skirt, for Single Exhaust, Split Fender, Kenworth T800 (Day Cab), 2008 & Later - X3AG2 (7/ 5-count LED), with Block Heater Cutout
MD5386	Cab Skirt, for Single Exhaust, Split Fender, Kenworth T800 (Day Cab), 2008 & Later - X3ACG2 (7/ 5-count LED), with Block Heater Cutout
MD5387	Cab Skirt, for Single Exhaust, Split Fender, Kenworth T800 (Day Cab), 2008 & Later - 2" Round Starburst (7/ 5-count LED) with Visor Bezels, with Block Heater Cutout



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.



X3AG2 = Amber Light with an Amber Lens.



X3ACG2 = Amber Light with a Clear Lens.



2" Round Light = Amber Light with an Amber Lens.

CAB SKIRTS - FOR AEROCAB (2011/ 2012 & LATER)

Designed for 2011+ and 2012+ T800 models. Hardware, lights, and harnesses included. Sold in pairs. For 1995 to 2010 cab skirts see page 1-12



MD5631



T800/ T600

Sleeper Skirts

See Page 9-76 to 9-78

Table 1-4: T800/ T600 - Cab Skirts For Aerocab Models (2011/ 2012 & Later)

Part No.	Description
MD5630	Cab Skirt, Underbody DPF Only, Split Fender, Kenworth T800 (Aerocab), 2011 & Later - Plain, with Block Heater Cutout
MD5631	Cab Skirt, Underbody DPF Only, Split Fender, Kenworth T800 (Aerocab), 2011 & Later - X2AG2 Lights (3-count LED), with Block Heater Cutout
MD5632	Cab Skirt, Underbody DPF Only, Split Fender, Kenworth T800 (Aerocab), 2011 & Later - X2ACG2 Lights (3-count LED), with Block Heater Cutout
MD5633	Cab Skirt, Underbody DPF Only, Split Fender, Kenworth T800 (Aerocab), 2011 & Later - 2" Round Light Holes (3-count), with Block Heater Cutout
MD5764	Cab Skirt, Step DPF Only, Split Fender, Kenworth T800 (Aerocab), 2012 & Later - Plain, with Block Heater Cutout
MD5765	Cab Skirt, Step DPF Only, Split Fender, Kenworth T800 (Aerocab), 2012 & Later - X2AG2 Lights (3-count LED), with Block Heater Cutout
MD5766	Cab Skirt, Step DPF Only, Split Fender, Kenworth T800 (Aerocab), 2012 & Later - X2ACG2 Lights (3-count LED), with Block Heater Cutout
MD5767	Cab Skirt, Step DPF Only, Split Fender, Kenworth T800 (Aerocab), 2012 & Later - 2" Round Light Holes (3-count), with Block Heater Cutout



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.

CAB SKIRTS - FOR AEROCAB/ MODULAR (1995 to 2010)

Designed for T800 models from 1995 to 2010. Skirting available for both Aerocab and Modular cab. Hardware, lights, and harnesses included. Sold in pairs. For 2011+ cab skirts see page 1-11.



Sleeper Skirts

See Page 9-76 to 9-78

Table 1-5: T800/ T600 - Cab Skirts For Aerocab & Modular Models (1995 to 2010)

Part No.	Description
MD0198	Cab Skirt, Split Fender, Kenworth T800 (Aerocab), 1995 to 2010 - Plain, 3.25" Wide, 38" Long
MD0181	Cab Skirt, Split Fender, Kenworth T800 (Aerocab), 1995 to 2010 - X2AG2 Lights (3-count LED), 3.25" Wide, 38" Long
MD551	Cab Skirt, Split Fender, Kenworth T800 (Aerocab), 1995 to 2010 - X2ACG2 Lights (3-count LED), 3.25" Wide, 38" Long
MD0194	Cab Skirt, Split Fender, Kenworth T800 (Aerocab), 1995 to 2010 - 2" Round Lights (3-count), 3.25" Wide, 38" Long
MD0199	Cab Skirt, Kenworth T800 (Aerocab), 1995 to 2010 - Plain, 3.25" Wide, 40.56" Long
MD0175	Cab Skirt, Kenworth T800 (Aerocab), 1995 to 2010 - X2AG2 Lights (3-count LED), 3.25" Wide, 40.56" Long
MD549	Cab Skirt, Kenworth T800 (Aerocab), 1995 to 2010- X2ACG2 Lights (3-count LED), 3.25" Wide, 40.56" Long
MD0200	Cab Skirt, Kenworth T800 (Modular) 1995 to 2010 - Plain, 3.25" Wide, 38" Long
MD0178	Cab Skirt, Kenworth T800 (Modular) 1995 to 2010 - X2AG2 Lights (3-count LED), 3.25" Wide, 38" Long



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.

ENGINE AIR INTAKE SHROUD

Mounts to the hood, hardware supplied, drilling required. Designed for the T800 model. Sold in pairs.



MD5381



Table 1-6: T800/ T600 - Engine Air Intake Shroud

Part No.	Description
MD5381	Engine Air Intake Shroud, Kenworth T800, 2008 & Later - Metton Hood
MD1516	Engine Air Intake Shroud, Kenworth T800 Standard Cab

FENDER GUARDS - T600

Shield and protect your fenders from common road debris. Drilling required. All hardware included. These Fender Guards are designed to fit a T600. For T-800 fender guards see page 1-14. Sold in pairs.



Table 1-7: T600 - Fender Guards

Part No.	Description
MD1576	Fender Guard, Above Headlight, Kenworth T600 - Plain
MD1575	Fender Guard, Below Headlight, Kenworth T600 - Plain

FENDER GUARDS - T800

Shield and protect your fenders from common road debris. Drilling required. These Fender Guards are designed to fit a T800. For T600 fender guards see page 1-13. All hardware included. Sold in pairs.



MD4510



MD4510



MD1573



MD1574



MD1553

Table 1-8: T800 - Fender Guards

Part No.	Description
MD4510	Fender Guard, Below Headlight, Kenworth T800 (Curved Glass), 2007 & Later - Plain
MD1573	Fender Guard, Below Headlight, Kenworth T800 (Curved Glass) - Plain
MD0879	Fender Guard, Below Headlight, Kenworth T800 (Curved Glass) - with Flames
MD1574	Fender Guard, Below Headlight, Kenworth T800 (Standard Cab/ Flat Glass) - Plain
MD1553	Fender Guard, Headlight Surround, Kenworth T800 (Standard Cab/ Flat Glass) - Plain

GRILLE BARS

Grille Bars are sold as a set of 7 or by the individual bars. Designed for the T800. Attaches using supplied hardware.



MD5697

Table 1-9: T800/ T600 - Grille Bars


Part No.	Description
MD5697	Grille Bars, Full Set Of 7, Kenworth T800
MD5699	Grille Bar, Individual Bar, Kenworth T800
MD5698	Grille Bar, Center Bar, Kenworth T800

GRILLE BEZEL TRIM

The Grille Bezel Trim helps protect your paint from road debris. Drilling and bolting required. All hardware included. Designed for the T600. Sold individually.



MD1509

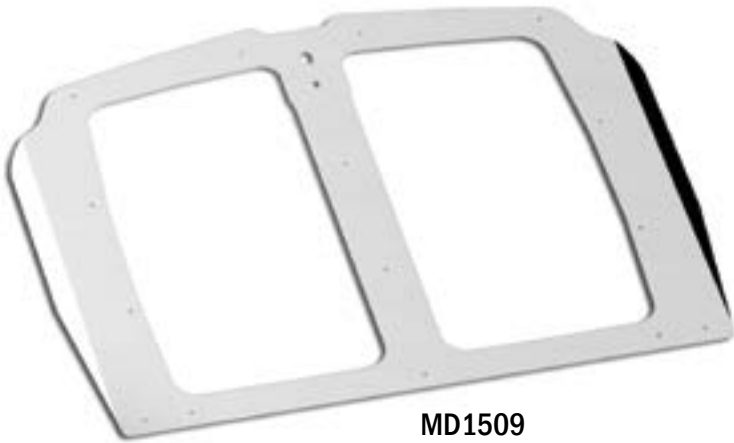

MD1509

Table 1-10: T600 - Grille Bezel Trim

Part No.	Description
MD1509	Grille Bezel Trim, Kenworth T600

GRILLE DEFLECTOR

The Grille Deflector is used to protect your T800 from road debris and helps keep the side of the hood clean. Mounts using existing hardware. Sold in pairs.



MD1547

Table 1-11: T800 - Grille Deflector

Part No.	Description
MD1547	Grille Deflector, Kenworth T800

SLEEPER SKIRTS

Full list of sleeper skirt options for T800/ W900 on Page 9-76 to 9-78.



MD5641

SUNVISOR TRIM STRIP

Fits both the T800 and T600. Mounts over the original black trim strip. no drilling or hardware required, uses existing hardware. Sold individually.



Table 1-12: T800/ T600 - Sunvisor Trim Strip

Part No.	Description
MD1517	Sunvisor Trim Strip, Kenworth T800/ T600



Stainless Steel Accessories for Trucks

2

T700

*Proven, reliable and
always innovative.*

TRP® offers reliable
aftermarket products
that are designed
and tested to exceed
customers' expectations
regardless of the truck
make, model or age.



T700

BUG DEFLECTOR

Drilling of mounting holes through hood required. Attaches using supplied hardware. Guaranteed not to break. Sold individually.



MD5689



Table 2-1: T700 - Bug Deflector

Part No.	Description
MD5689	Bug Deflector, Kenworth T700

BUNK VENT COVER/ BUNK WINDOW TRIM

The bunk vent cover consists of the vent cover and outer trim ring. Attaches using 3M two-sided tape. Sold as a 2-piece kit. The bunk window trim accents bunk window. Attaches using supplied 3M two-sided tape. Sold in pairs.



MD5682



MD5680



MD5682

Table 2-2: T700 - Bunk Vent Cover & Bunk Window Trim

Part No.	Description
MD5680	Bunk Vent Cover, Kenworth T700
MD5682	Bunk Window Trim, Kenworth T700

CAB SKIRTS

Attaches using supplied hardware. Must remove T700 emblem and re-install after cab skirt is mounted. Sold in pairs.



Table 2-3: T700 - Cab Skirt

Sleeper Skirts
See Page 2-24

Part No.	Description
MD5685	Cab Skirt, Kenworth T700 - Plain

DOOR HANDLE ACCENT

Accents your door handle while at the same time protecting the paint. Attaches using supplied 3M two-sided tape. Sold in pairs.



Table 2-4: T700 - Door Handle Accent

Part No.	Description
MD1344	Door Handle Accent, T700/ T2000 Kenworth

DOOR WINDOW ACCENT

The door window accent trim attaches below the passenger and driver door window using 3M two-sided tape. Sold in pairs.



Table 2-5: T700 - Door Window Accent

Part No.	Description
MD5679	Door Window Accent, Kenworth T700

DOOR WINDOW BEZEL TRIM

The door window bezel trim surrounds your door window and attaches using 3M two-sided tape. Sold individually.



Table 2-6: T700 - Door Window Bezel Trim

Part No.	Description
MD1356	Door Window Bezel Trim, Kenworth T700/ T2000

EXTENDER SKIRT

Attaches using 3M two-sided tape. Sold in pairs.



Table 2-7: T700 - Extender Skirt

Part No.	Description
MD5683	Extender Skirt, Kenworth T700 - Plain

HEADLIGHT TRIM

Accents the headlight. Attaches using supplied 3M two-sided tape and hardware. Sold in pairs.



Table 2-8: T700 - Headlight Trim

Part No.	Description
MD5681	Headlight Trim, Kenworth T700

HOOD LATCH GUARD

Attaches using 3M two-sided tape. Sold in pairs.



Table 2-9: T700 - Hood Latch Guard

Part No.	Description
MD5686	Hood Latch Guard, Kenworth T700

KEY GUARD ACCENT

Key Guard Accent in the shape of the Kenworth logo. Attaches using supplied 3M two-side tape. Sold in pairs.



Table 2-10: T700 - Key Guard Accent

Part No.	Description
MD1353	Key Guard Accent, T700/ T2000 Kenworth

Kick PLATES - BACK

Trim Plates for both the upper and lower step. **MD4444** attaches with supplied hardware and 3M two-sided tape. **MD4443** attaches using supplied 3M two-sided tape. Sold in pairs.



MD4444



MD4443

Table 2-11: T700 - Back Kick Plate Trim

Part No.	Description
MD4444	Back Kick Plate Trim, Lower Step, Kenworth T700/ T660/ T680
MD4443	Back Kick Plate Trim, Upper Step, Kenworth T700/ T660/ T680

Kick PLATES - FRONT


Kick plates available for the upper and lower areas of the steps. Attaches using supplied hardware. Sold in pairs.



MD5675



MD5678

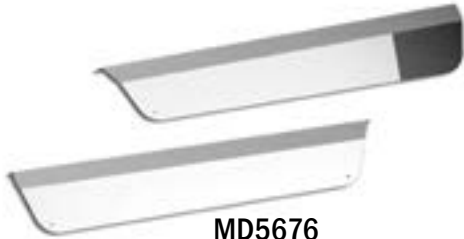

MD5676



MD5677



MD5675

Table 2-12: T700 - Kick Plates

Part No.	Description
MD5678	Front Kick Plate, Lower Step, Kenworth T700 - Plain
MD5676	Front Kick Plate, Upper Step, Kenworth T700 - Plain
MD5677	Front Kick Plate, Upper Step, Kenworth T700 - with T700 Cutout
MD5675	Front Kick Plate, Upper Step, Kenworth T700 - with Bug Cutout

SKIRTING KIT

Includes hood latch guard, cab skirt (with a block heater cutout), sleeper skirt, and extender skirt. Attaches using supplied hardware. Sold as a 8-piece kit. Lighted kits are not available due to the configuration of the T700.



Table 2-13: T700 - Skirting Kit

Part No.	Description
MD5687	Skirting Kit, Includes: Latch Guard/ Cab/ Sleeper/ Extender, Kenworth T700 - Plain

SLEEPER SKIRT

Attaches using supplied hardware. Sold in pairs. Lighted skirts are not available due to the configuration of the T700. Extenders are found on page 2-21.



Table 2-14: T700 - Sleeper Skirt

Part No.	Description
MD5684	Sleeper Skirt, Kenworth T700 - Plain with Block Heater Cutout



Stainless Steel Accessories for Trucks

3

T680

*Proven, reliable and
always innovative.*

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



T680

BUG DEFLECTOR

Drilling of mounting holes through hood required. Attaches using supplied hardware. Guaranteed not to break. Sold individually.



Table 3-1: T680 - Bug Deflector


Part No.	Description
MD692	Bug Deflector, Kenworth T680

CAB SKIRTS

Mounts to underside of cab, some drilling required. Hardware included. Sold in pairs.



MD684

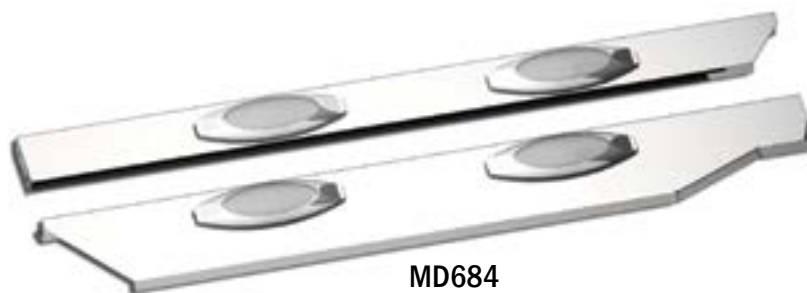

MD684

Table 3-2: T680 - Cab Skirts

Part No.	Description
MD682	Cab Skirt, Kenworth T680 (Day Cab) - Plain
MD688	Cab Skirt, Kenworth T680 (Day Cab) - Plain, with Block Heater Cutout
MD683	Cab Skirt, Kenworth T680 (Day Cab) - X2AG2 Lights (2-count LED)
MD689	Cab Skirt, Kenworth T680 (Day Cab) - X2AG2 Lights (2-count LED), with Block Heater Cutout
MD684	Cab Skirt, Kenworth T680 (Day Cab) - X2ACG2 Lights (2-count LED)
MD690	Cab Skirt, Kenworth T680 (Day Cab) - X2ACG2 Lights (2-count LED), with Block Heater Cutout



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.

DOOR HANDLE TRIM

A stainless steel accent to highlight and protect the door handles. Attaches using 3M two-sided tape. Sold in pairs.



Table 3-3: T680 - Door Handle Trim

Part No.	Description
MD3001	Door Handle Trim, Kenworth T680

DOUBLE LICENSE PLATE HOLDER

Attaches using supplied hardware and brackets. Sold individually.



Table 3-4: T680 - Double License Plate Holder

Part No.	Description
MD691	Double License Plate Holder, Kenworth T680

FENDER LIGHT TRIM

A stainless steel accent to highlight the fender light. Attaches using 3M two-sided tape. Sold in pairs.



Table 3-5: T680 - Fender Light Trim

Part No.	Description
MD3003	Fender Light Trim, Kenworth T680

FENDER WHEEL WELL TRIM

Fender Wheel Well Trim is available for T680 models with or without fairings. Attach using supplied 3M two-sided tape. Sold as a kit.



MD663

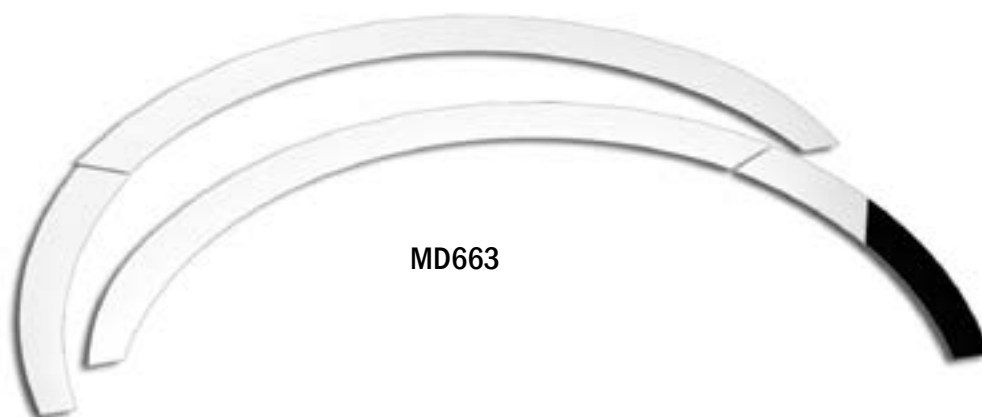


Table 3-6: T680 - Fender Wheel Well Trim

Part No.	Description
MD663	Fender Wheel Well Trim, Kenworth T680 (with Fairings)
MD3018	Fender Wheel Well Trim, Kenworth T680 (without Fairings)

HEADLIGHT TRIM

Attaches using supplied 3M two-sided tape and hardware. Sold in pairs.



Table 3-7: T680 - Headlight Trim

Part No.	Description
MD3019	Headlight Trim, Kenworth T680

Kick PLATES

Trim Plates for both the upper and lower steps. **MD4444** attaches with supplied hardware and 3M two-sided tape. **MD4443** attaches using supplied 3M two-sided tape. Sold in pairs.



MD4444



MD4443

Table 3-8: T680 - Kick Plates

Part No.	Description
MD4444	Back Kick Plate Trim, Lower Step, Kenworth T680/ T660/ T700
MD4443	Back Kick Plate Trim, Upper Step, Kenworth T680/ T660/ T700

SIDE HOOD TRIM

Attaches using supplied 3M two-sided tape. Sold as a 2-piece kit.



Table 3-9: T680 - Side Hood Trim


Part No.	Description
MD3028	Side Hood Trim, Kenworth T680

SKIRTING KITS

Kit includes; cab skirt, filler skirt (panel between cab and sleeper), and sleeper skirt. Attaches using supplied hardware. Sold in kits. *(2 / 1/ 5) Each number represents the number of lights per panel, i.e. this kit has 2 lights on the cab skirt, 1 light on the filler (transition) skirt, and 5 lights on the sleeper skirt.



MD681

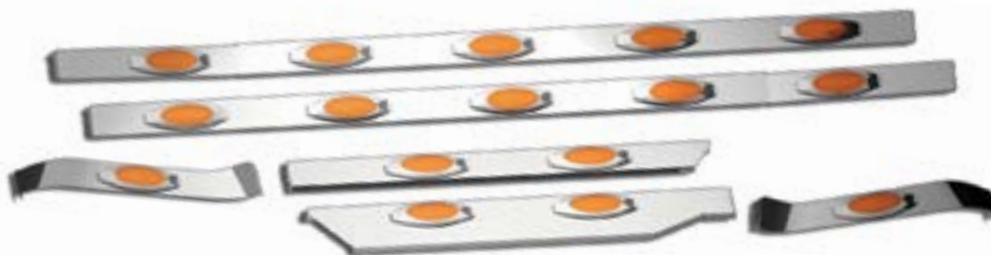

MD680

Table 3-10: T680 - Skirting Kits

Part No.	Description
MD666	Skirting Kit, Cab/ Transition/ Sleeper, Kenworth T680 - Plain, No Block Heater Cutout, 2.5" Wide
MD685	Skirting Kit, Cab/ Transition/ Sleeper, Kenworth T680 - Plain, with Block Heater Cutout, 2.5" Wide
MD680	Skirting Kit, Cab/ Transition/ Sleeper, Kenworth T680- X2AG2 Lights (2/ 1/ 5-count LED), No Block Heater Cutout, 2.5" Wide
MD686	Skirting Kit, Cab/ Transition/ Sleeper, Kenworth T680- X2AG2 Lights (2/ 1/ 5-count LED), with Block Heater Cutout, 2.5" Wide
MD681	Skirting Kit, Cab/ Transition/ Sleeper, Kenworth T680- X2ACG2 Lights (2/ 1/ 5-count LED), No Block Heater Cutout, 2.5" Wide
MD687	Skirting Kit, Cab/ Transition/ Sleeper, Kenworth T680- X2ACG2 Lights (2/ 1/ 5-count LED), with Block Heater Cutout, 2.5" Wide



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.

SLEEPER WINDOW TRIM

This trim piece is used to accentuate the sleeper window. Attaches using supplied 3M two-sided tape. Sold in pairs.



Table 3-11: T680 - Sleeper Window Trim

Part No.	Description
MD665	Sleeper Window Trim, Kenworth T680



*Proven, reliable and
always innovative.*

TRP® offers reliable
aftermarket products
that are designed
and tested to exceed
customers' expectations
regardless of the truck
make, model or age.



T440

AIR INTAKE/ LOGO TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.

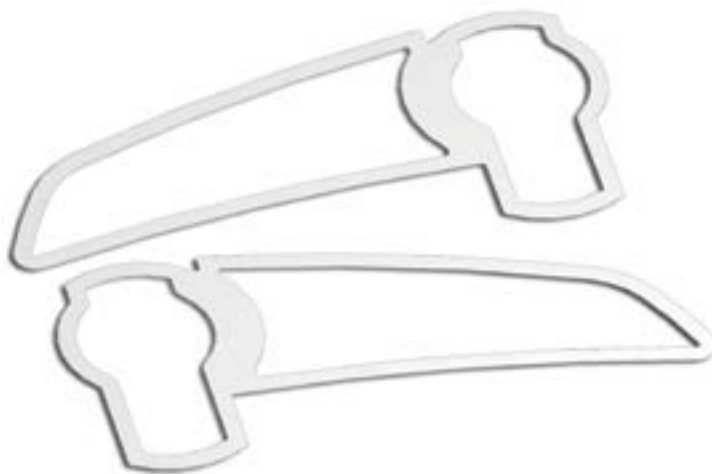


Table 4-1: T440 - Air Intake & Logo Trim

Part No.	Description
MD5748	Air Intake/ Logo Trim, Kenworth T440

BUG DEFLECTOR

Drilling of mounting holes through hood required. Attaches using supplied hardware. Guaranteed not to break. Sold individually.



Table 4-2: T440 - Bug Deflector

Part No.	Description
MD5746	Bug Deflector, Kenworth T440

EMBLEM ACCENT TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.



Table 4-3: T440 - Emblem Accent Trim

Part No.	Description
MD5747	Emblem Accent Trim, Kenworth T440

FENDER LIGHT TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.



Table 4-4: T440 - Fender Light Trim

Part No.	Description
MD4448	Fender Light Trim, Kenworth T440/ T660

FENDER/ HEADLIGHT TRIM

Attaches using supplied 3M two-sided tape and hardware. Sold as a 3-piece kit.



Table 4-5: T440 - Fender/ Headlight Trim

Part No.	Description
MD5749	Fender/ Headlight Trim, Kenworth T440



5

T660

***Proven, reliable and
always innovative.***

**TRP® offers reliable
aftermarket products
that are designed
and tested to exceed
customers' expectations
regardless of the truck
make, model or age.**



T660

AIR INTAKE/ LOGO TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.



Table 5-1: T660 - Air Intake/ Logo Trim

Part No.	Description
MD5415	Air Intake/ Logo Trim, Kenworth T660/ T370, 2008 & Later

BUG DEFLECTOR

Drilling of mounting holes through hood required. Attaches using supplied hardware. Guaranteed not to break. Sold individually.



Table 5-2: T660 - Bug Deflector

Part No.	Description
MD4440	Bug Deflector, Kenworth T660, 2007 & Later

EMBLEM ACCENT TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.



Table 5-3: T660 - Emblem Accent Trim

Part No.	Description
MD4445	Emblem Accent Trim, Kenworth T660/ T370, 2007 & Later

FENDER LIGHT TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.



Table 5-4: T660 - Fender Light Trim

Part No.	Description
MD4448	Fender Light Trim, Kenworth T660/ T440, 2007 & Later

FENDER/ HEADLIGHT TRIM

Attaches using supplied 3M two-sided tape. Sold as a 3-piece kit.



Table 5-5: T660 - Fender/ Headlight Trim

Part No.	Description
MD5416	Fender/ Headlight Trim, Kenworth T660, 2007 & Later

KICK PLATE TRIM & PANELS


Kick plates available for the upper and lower areas of both the back and front steps. Attaches using supplied 3M two-sided tape and hardware. MD4443 attaches using only 3M two-sided tape. Sold in pairs.



MD4446



MD4444

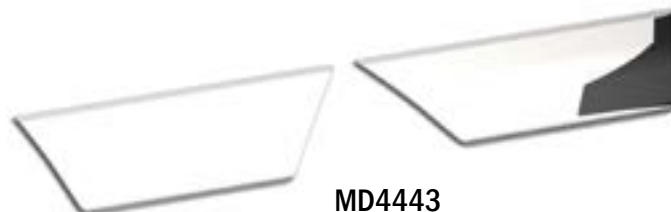


MD4443



MD5778



MD4446

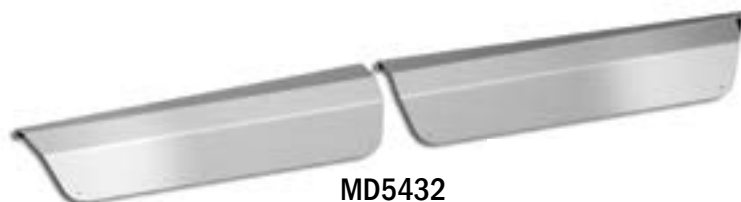

MD5432



MD4447

Table 5-6: T660 - Kick Plate Trim & Panels

Part No.	Description
MD4444	Back Kick Plate Trim, Lower Step, Kenworth T660/ T680/ T700, 2007 & Later
MD4443	Back Kick Plate Trim, Upper Step, Kenworth T660/ T680/ T700, 2007 & Later
MD5778	Front Kick Plate Panel, Upper Step, Kenworth T660, 2010 & Later - Etched with T660 Logo
MD4446	Front Kick Plate Panel, Upper Step, Kenworth T660, 2007 to 2009 - Etched with T660 Logo
MD5432	Front Kick Plate Panel, Upper Step, Kenworth T660, 2007 to 2009 - Plain
MD4447	Front Kick Plate Panel, Lower Step, Kenworth T660, 2007 & Later - Plain

LICENSE PLATE HOLDER

Attaches using supplied hardware and brackets. Sold individually.



Table 5-7: T660 - License Plate Holder

Part No.	Description
MD5417	License Plate Holder, Kenworth T660 - Two Plate

SCUFF PLATES

Attaches below cab door using existing hardware. Cannot be used in conjunction with T660 Cab/ Sleeper/ Extender skirting kits. Sold in pairs.



MD5761



MD5761



MD5762

Table 5-8: T660 - Scuff Plates

Part No.	Description
MD5761	Scuff Plate, Below Cab Door, Kenworth T660, 2010 & Later - Plain, no Block Heater Cutout
MD5762	Scuff Plate, Below Cab Door, Kenworth T660, 2010 & Later - Plain, with Block Heater Cutout

SLEEPER WINDOW TRIM

For T660 Aerocab Aerodyne Sleepers. Attaches to the upper, forward facing sleeper window using supplied 3M two-sided tape. Sold in pairs.



MD5743



Table 5-9: T660 - Sleeper Window Trim

Part No.	Description
MD5743	Upper Sleeper Forward Facing Window Trim, Kenworth T660/ W900 (Aerocab Aerodyne)

SKIRTING KITS - FOR 62" SLEEPERS

Kit includes; cab skirt and 62" sleeper skirt with extender. Attaches using supplied hardware. Sold as a kit.

*(4 / 5/ 1) Each number represents the number of lights per panel, i.e. this kit has 4 lights on the cab skirt, 5 lights on the sleeper skirt and 1 light on the extender skirt.



MD5795

Table 5-10: T660 - 62" Skirting Kit

Part No.	Description
MD5795	Skirting Kit, Cab/ 62" Sleeper with Extender, Kenworth T660, 2010 & Later - P168A Lights (4/ 5/ 1-count LED), with Block Heater Cutout
MD5796	Skirting Kit, Cab/ 62" Sleeper with Extender, Kenworth T660, 2010 & Later - P168AC Lights (4/ 5/ 1-count LED), with Block Heater Cutout



P168A = Amber Light with an Amber Lens.



P168AC = Amber Light with a Clear Lens.

SKIRTING KITS - FOR 72" SLEEPERS

Kit includes; cab skirt and 72" sleeper skirt with extender. Attaches using supplied hardware. Sold as a kit.

*(4 / 6 / 1) Each number represents the number of lights per panel, i.e. this kit has 4 lights on the cab skirt, 6 lights on the sleeper skirt and 1 light on the extender skirt.



MD5799

Table 5-11: T660 - 72" Skirting Kit

Part No.	Description
MD5798	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2013 & Later - Plain, with Block Heater Cutout
MD5799	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2013 & Later - P168A Lights (4/ 6/ 1-count LED), with Block Heater Cutout
MD600	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2013 & Later - P168AC Lights (4/ 6/ 1-count LED), with Block Heater Cutout
MD5616	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2010 to 2012 - Plain, with Block Heater Cutout
MD5617	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2010 to 2012 - Plain, no Block Heater Cutout
MD5619	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2010 to 2012 - P168A Lights (4/ 6/ 1-count LED), with Block Heater Cutout
MD5621	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2010 to 2012 - P168A Lights (4/ 6/ 1-count LED), no Block Heater Cutout
MD5620	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2010 to 2012 - P168AC Lights (4/ 6/ 1-count LED), with Block Heater Cutout
MD5622	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2010 to 2012 - P168AC Lights (4/ 6/ 1-count LED), no Block Heater Cutout
MD5268	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2008 to 2009 - P168A Lights (4/ 6/ 1-count LED), with Block Heater Cutout
MD5450	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2008 to 2009 - P168A Lights (4/ 6/ 1-count LED), no Block Heater Cutout
MD5269	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2008 to 2009 - P168AC Lights (4/ 6/ 1-count LED), with Block Heater Cutout
MD5451	Skirting Kit, Cab/ 72" Sleeper with Extender, Kenworth T660, 2008 to 2009 - P168AC Lights (4/ 6/ 1-count LED), no Block Heater Cutout



P168A = Amber Light with an Amber Lens.



P168AC = Amber Light with a Clear Lens.

SKIRTING KITS - FOR 86" SLEEPERS

Kit includes; cab skirt and 86" sleeper skirt with extender. Attaches using supplied hardware. Sold as a kit. *(4 / 7/ 1) Each number represents the number of lights per panel, i.e. this kit has 4 lights on the cab skirt, 7 lights on the sleeper skirt and 1 light on the extender skirt.



MD5769



MD603

Table 5-12: T660 - 86" Sleepers

Part No.	Description
MD601	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2013 & Later - Plain, with Block Heater Cutout
MD602	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2013 & Later - P168A Lights (4/ 7/ 1-count LED), with Block Heater Cutout
MD603	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2013 & Later - P168AC Lights (4/ 7/ 1-count LED), with Block Heater Cutout
MD5670	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2010 to 2012 - Plain, with Block Heater Cutout
MD5669	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2010 to 2012 - Plain, No Block Heater Cutout
MD5769	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2010 to 2012 - P168A Lights (4/ 7/ 1-count LED), with Block Heater Cutout
MD5768	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2010 to 2012 - P168A Lights (4/ 7/ 1-count LED), No Block Heater Cutout
MD5668	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2010 to 2012 - P168AC Lights (4/ 7/ 1-count LED), with Block Heater Cutout
MD5667	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2010 to 2012 - P168AC Lights (4/ 7/ 1-count LED), No Block Heater Cutout
MD5410	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2008 to 2009 - P168A Lights (4/ 7/ 1-count LED), with Block Heater Cutout
MD5411	Skirting Kit, Cab/ 86" Sleeper with Extender, Kenworth T660, 2008 to 2009 - P168AC Lights (4/ 7/ 1-count LED), with Block Heater Cutout



P168A = Amber Light with an Amber Lens.



P168AC = Amber Light with a Clear Lens.



6

W900

***Proven, reliable and
always innovative.***

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



W900

AIR CLEANER LIGHT BARS - SEE PAGE 11-84

Due too the large quantity of Air Cleaner Light Bars for the W900, we have made full section found on Page 11-84.

BATTERY/ TOOLBOX PANELS

High quality covers designed to replace OEM aluminium checker-plate covers. Attaches using supplied hardware. Sold in pairs.



Table 6-1: W900 - Battery /Toolbox Panels

Part No.	Description
MD1404	Battery/ Toolbox Panels, Kenworth W900/ T800 - 39.5" Long
MD1405	Battery/ Toolbox Panels, Kenworth W900/ T800 - 45" Long

BUG DEFLECTOR - ACRYLIC & STAINLESS STEEL TRIM

This Bug Deflector is constructed of 1/4" smoked acrylic and trim piece is stainless steel. Attaches using supplied mounting hardware. Sold individually.



Table 6-2: W900 - Bug Deflector (with Acrylic & Stainless Steel Trim)

Part No.	Description
MD5612	Bugshield & Trim, Kenworth W900L, 1998 & Later - with Logo

BUG DEFLECTORS - STAINLESS STEEL

Drilling of mounting holes through hood required. Attaches using supplied hardware. Guaranteed not to break. Sold individually.



MD1541




MD1541

Table 6-3: W900 - Bug Deflectors (Stainless Steel)

Part No.	Description
MD1542	Bug Deflector, Kenworth W900B/ C500 - Plain
MD1541	Bug Deflector, Kenworth W900L

CAB SKIRT/ KICK PANEL

The kick panel cab skirt replaces the OEM kick panel, and extends down the extra 3" to accommodate the sleeper skirt. These panels include the driver side block heater hole, and have an optional courtesy light cutout. Lights, hardware and harnesses included. Sold in pairs.

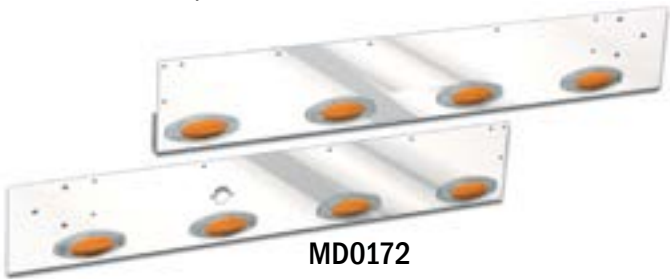

MD0172

Table 6-4: W900 - Cab Skirt/ Kick Panel

Sleeper Skirts
See Page 9-76 to 9-78

Part No.	Description
MD1606	Cab Skirt/ Kick Panel, Kenworth W900 (Aerocab) Pre 2010 - Plain, with Block Heater Cutout
MD0172	Cab Skirt/ Kick Panel, Kenworth W900 (Aerocab) Pre 2010 - X2AG2 Lights (4-count LED), with Block Heater Cutout
MD0184	Cab Skirt/ Kick Panel, Kenworth W900 (Aerocab) Pre 2010 - X2AG2 Lights (4-count LED), with Block Heater Cutout & Courtesy Light
MD543	Cab Skirt/ Kick Panel, Kenworth W900 (Aerocab) Pre 2010 - X2ACG2 Lights (4-count LED), with Block Heater Cutout
MD545	Cab Skirt/ Kick Panel, Kenworth W900 (Aerocab) Pre 2010 - X2ACG2 Lights (4-count LED), with Block Heater Cutout & Courtesy Light



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.

CAB SKIRTS WITH UNDERBODY DPF

For models with Underbody DPF. Lights, hardware and harnesses included. Sold in pairs.



MD5672



MD5665



MD5742



MD610

Sleeper Skirts

See Page 9-76 to 9-78

Table 6-5: W900 - Cab Skirt with Underbody DPF

Part No.	Description
MD5662	Cab Skirt, Underbody DPF, Kenworth W900L, 2011 & Later - Plain, with Block Heater Cutout
MD5671	Cab Skirt, Underbody DPF, Kenworth W900L, 2011 & Later - Plain, No Block Heater Cutout
MD5663	Cab Skirt, Underbody DPF, Kenworth W900L, 2011 & Later - X2AG2 Lights (3-count LED), with Block Heater Cutout
MD5672	Cab Skirt, Underbody DPF, Kenworth W900L, 2011 & Later - X2AG2 Lights (3-count LED), No Block Heater Cutout
MD5664	Cab Skirt, Underbody DPF, Kenworth W900L, 2011 & Later - X2ACG2 Lights (3-count LED), with Block Heater Cutout
MD5673	Cab Skirt, Underbody DPF, Kenworth W900L, 2011 & Later - X2ACG2 Lights (3-count LED), No Block Heater Cutout
MD5665	Cab Skirt, Underbody DPF, Kenworth W900L, 2011 & Later - 2" Round Light Holes (3-count), with Block Heater Cutout
MD5674	Cab Skirt, Underbody DPF, Kenworth W900L, 2011 & Later - 2" Round Light Holes (3-count), No Block Heater Cutout
MD608	Cab Skirt, Underbody DPF, Kenworth W900B, 2011 & Later - Plain, with Dual Block Heater Cutouts
MD5742	Cab Skirt, Underbody DPF, Kenworth W900B, 2011 & Later - X2AG2 Lights (3-count LED), with Block Heater Cutout
MD609	Cab Skirt, Underbody DPF, Kenworth W900B, 2011 & Later - X2AG2 Lights (3-count LED), with Dual Block Heater Cutouts
MD610	Cab Skirt, Underbody DPF, Kenworth W900B, 2011 & Later - X2ACG2 Lights (3-count LED), with Dual Block Heater Cutouts



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.

CAB SKIRTS WITH STEP DPF

For models with Step DPF. Lights, hardware and harnesses included. Sold in pairs.



Sleeper Skirts
See Page 9-76 to 9-78

Table 6-6: W900 - Cab Skirt with Step DPF

Part No.	Description
MD5774	Cab Skirt, Step DPF, Kenworth W900L, 2011 & Later - Plain, with Block Heater Cutout
MD5775	Cab Skirt, Step DPF, Kenworth W900L, 2011 & Later - X2AG2 Lights (3-count LED), with Block Heater Cutout
MD5776	Cab Skirt, Step DPF, Kenworth W900L, 2011 & Later - X2ACG2 Lights (3-count LED), with Block Heater Cutout
MD5777	Cab Skirt, Step DPF, Kenworth W900L, 2011 & Later - 2" Round Light Holes (3-count), with Block Heater Cutout
MD5779	Cab Skirt, Step DPF, Kenworth W900B, 2011 & Later - Plain, with Block Heater Cutout
MD611	Cab Skirt, Step DPF, Kenworth W900B, 2011 & Later - Plain, with Dual Block Heater Cutouts
MD5780	Cab Skirt, Step DPF, Kenworth W900B, 2011 & Later - X2AG2 Lights (3-count LED), with Block Heater Cutout
MD612	Cab Skirt, Step DPF, Kenworth W900B, 2011 & Later - X2AG2 Lights (3-count LED), with Dual Block Heater Cutouts
MD5781	Cab Skirt, Step DPF, Kenworth W900B, 2011 & Later - X2ACG2 Lights (3-count LED), with Block Heater Cutout
MD5782	Cab Skirt, Step DPF, Kenworth W900B, 2011 & Later - 2" Round Light Holes (3-count), with Block Heater Cutout
MD613	Cab Skirt, Step DPF, Kenworth W900B, 2011 & Later - X2ACG2 Lights (3-count LED), with Dual Block Heater Cutouts



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.

CENTER HOOD STRIP

Accents center ridge on hood. We suggest to use in combination with a stainless steel bug deflector (See Page 6-45). Mounts using supplied hardware and 3M two-sided tape. Sold individually.



MD0225



MD0225

Table 6-7: W900 - Center Hood Strip

Part No.	Description
MD5397	Center Hood Strip, Kenworth W900L (Metton Hood), 2008 & Later - Plain
MD0225	Center Hood Strip, Kenworth W900L, Pre 2008 - Plain, (Will Not Fit Models with Metton Hood)

ENGINE AIR INTAKE SHROUDS

Mounts to hood, hardware included, drilling required. Sold in pairs.



MD5396



MD5396



MD1514

Table 6-8: W900 - Engine Air Intake Shroud


Part No.	Description
MD5396	Engine Air Intake Shroud, Kenworth W900L, 2008 & Later - Metton Hood Models
MD1514	Engine Air Intake Shroud, Kenworth W900/ T800 Aerocab, Pre 2008

FENDER GUARDS

Mounts using supplied hardware. Sold in pairs.



MD5586

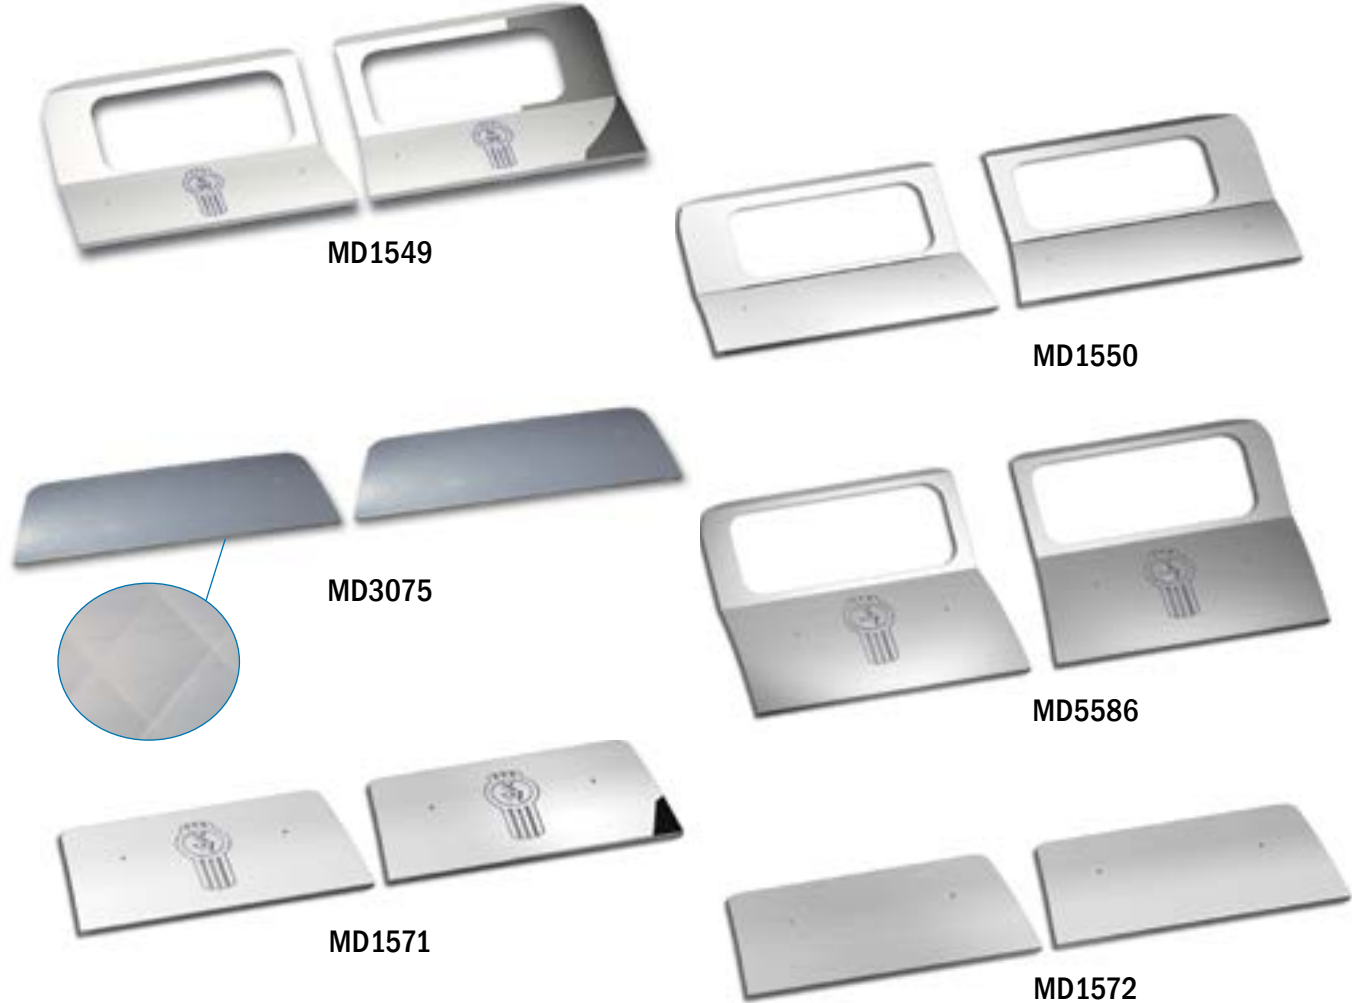

W900

Table 6-9: W900 - Fender Guard

Part No.	Description
MD1549	Fender Guard, Headlight Surround, Kenworth W900L - with Logo Cutout
MD1550	Fender Guard, Headlight Surround, Kenworth W900L - No Emblem
MD3075	Fender Guard, Under Headlight, Kenworth W900L - Quilted
MD1570	Fender Guard, Under Headlight, Kenworth W900L - No Emblem
MD5586	Fender Guard, Headlight Surround, Kenworth W900B, 2010 & Later - with Logo Cut-Out
MD3000	Fender Guard, Headlight Surround, Kenworth W900B, 2010 & Later - No Emblem
MD1571	Fender Guard, Under Headlight, Kenworth W900B (Aerocab) - with Emblem
MD1572	Fender Guard, Under Headlight, Kenworth W900B (Aerocab) - No Emblem
MD1551	Fender Guard, Headlight Surround, Kenworth W900B - with Logo Cutout
MD1552	Fender Guard, Headlight Surround, Kenworth W900B - No Emblem

GRILLE BARS

The Grille Bars replace the OEM aluminum grille bars. The center Grille Bar is shorter to accommodate grab handle. Mounts using supplied hardware. Welded & polished for that great stainless look. Sold individually (for those that feel seven isn't enough).



MD405 & MD406



MD406

Table 6-10: W900 - Grille Bars

Part No.	Description
MD405	Grille Bar Trim, Center Grille Bar, Kenworth W900L - Welded & Polished
MD406	Grille Bar Trim, Kenworth W900L - Welded & Polished

GRILLE/ BUMPER FILLER PANELS

Grille/ bumper filler panels hide those hood hinges and fill that open area between the grille and bumper. Easily mounts to grille bezel bolts. No additional hardware required. Sold individually.



MD1510



MD1511

Table 6-11: W900 - Grille/ Bumper Fill Panels

Part No.	Description
MD1511	Grille/ Bumper Filler Panel, Kenworth W900B
MD1510	Grille/ Bumper Filler Panel, Kenworth W900L

GRILLE DEFLECTOR

Grille deflectors help protect your paint from road debris, also helps keep the side of the hood clean. Uses existing OEM hardware. Sold in pairs.



Table 6-12: W900 - Grille Deflector

Part No.	Description
MD1546	Grille Deflector, Kenworth W900

HOOD/ BATTERY BOX FILLER PANELS

A replacement for the OEM hood battery box filler panel. Brackets, lights, hardware and harness included. Sold in pairs.



MD5661



MD0686



MD5661

Table 6-13: W900 - Hood Extension Panel

Part No.	Description
MD0686	Hood/ Battery Box Filler Panel, Kenworth W900L, 1997 & Later - X2AG2 Lights (4-count LED)
MD1784	Hood/ Battery Box Filler Panel, Kenworth W900L, 1997 & Later - Plain
MD5661	Hood/ Battery Box Filler Panel, Kenworth W900B, 2011 & Later - Plain



X2AG2 = Amber Light with an Amber Lens.

INTERIOR ACCESSORIES

Shift plate cover surrounds the shift stick. Uses existing OEM hardware. Sold individually.



MD0357

Table 6-14: W900 - Interior Accessories

Part No.	Description
MC0357	Shift Plate Cover, Kenworth W900L - with Logo

LICENSE PLATES/ SWING PLATES

Mounts to existing bumper mounting bolts on bumper face. Manufactured from a heavy gauge stainless steel to better resist road debris and damage. No drilling required. Hardware and license plate bezels included. Sold individually.



MD1503



MD1500

Table 6-15: W900 - License Plates/ Swing Plates

Part No.	Description
MD1502	License Plate/ Swing Plate, Kenworth W900 - Gull Wing Bumper with 1 Plate
MD1505	License Plate/ Swing Plate, Kenworth W900 - Gull Wing Bumper with 2 Plates
MD1508	License Plate/ Swing Plate, Kenworth W900 - Gull Wing Bumper with 3 Plates
MD1500	License Plate/ Swing Plate, Kenworth W900 - Texas Style Bumper with 1 Plate
MD1503	License Plate/ Swing Plate, Kenworth W900 - Texas Style Bumper with 2 Plates
MD1506	License Plate/ Swing Plate, Kenworth W900 - Texas Style Bumper with 3 Plates

LOWER HOOD PANEL

A replacement for the OEM stainless steel panel behind the front fender. Kenworth logo plate not included. Hardware supplied. Sold in pairs.



MD1785



Table 6-16: W900 - Lower Hood Panel

Part No.	Description
MD1785	Lower Hood Panel, Kenworth W900L, 1989 & Later - Plain
MD596	Lower Hood Panel, Kenworth W900L - No Logo
MD597	Lower Hood Panel, Kenworth W900L - with Logo Etched

MUD FLAP REINFORCEMENT BRACKET

An attractive bracket designed to give extra support to the front fender mud flap. Fastens using existing hardware. Sold in pairs.



Table 6-17: T660 - Mud Flap Reinforcement Bracket

Part No.	Description
MD1448	Mud Flap Reinforcement Bracket, Front Fender, Kenworth W900

SLEEPER WINDOW TRIM

For W900 Aerocab Aerodyne Sleepers. Attaches to the upper, forward facing sleeper window using pre-applied 3M two-sided tape. Sold in pairs.



MD5743



Table 6-18: T660 - Sleeper Window Trim

Part No.	Description
MD5743	Upper Sleeper Forward Facing Window Trim, Kenworth W900/T660 (Aerocab Aerodyne)

SKIRTING KIT

Kit includes; cab skirt, 86" sleeper skirt with fuel door and an extender skirt. Attaches using supplied hardware. Sold in kits. *(3 / 6/ 0) Each number represents the number of lights per panel, i.e. this kit has 3 lights on the cab skirt, 6 lights on the sleeper skirt and 0 lights on the extender skirt.



MD5628

Table 6-19: W900 - Skirting Kit

Part No.	Description
MD5626	Skirting Kit, Cab/ 86" Sleeper (with Fuel Door)/ Extender, Underbody DPF, Kenworth W900B, 2011 & Later - Plain, with Block Heater Cutout
MD5627	Skirting Kit, Cab/ 86" Sleeper (with Fuel Door)/ Extender, Underbody DPF, Kenworth W900B, 2011 & Later - X2AG2 Lights (3/ 6/ 0-count LED), with Block Heater Cutout
MD5628	Skirting Kit, Cab/ 86" Sleeper (with Fuel Door)/ Extender, Underbody DPF, Kenworth W900B, 2011 & Later - X2ACG2 Lights (3/ 6/ 0-count LED), with Block Heater Cutout



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.

SLEEPER SKIRTS - SEE PAGE 9-76 TO 9-78

All sleeper skirt options for the W900 are found in the Sleeper Skirt Section on Page 9-76 to 9-78.

TOW HOLE COVER

A polished stainless steel removable cover for hiding tow holes. Available for 2" square tow holes only. Snaps into tow hole using heavy gauge spring loaded clips. No hardware required. Sold in pairs.



MD1513



MD1513



MD1457



Table 6-20: W900 - Tow Hole Cover

Part No.	Description
MD1513	Tow Hole Cover, Kenworth W900 - Bolted
MD1457	Tow Hole Cover, Kenworth W900 - Boltless



Stainless Steel Accessories for Trucks

7

T300/ T370

*Proven, reliable and
always innovative.*

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



T300/ T370

AIR INTAKE/ LOGO TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.



T300/ T370

Table 7-1: T300/ T370 - Air Intake/ Logo Trim

Part No.	Description
MD5415	Air Intake/ Logo Trim, Kenworth T370/ T660

BUG DEFLECTOR

Drilling of mounting holes through hood required. Attaches using supplied hardware. Guaranteed not to break. Sold individually.



MD5255



Table 7-2: T300/ T370 - Bug Deflector

Part No.	Description
MD1007	Bug Deflector, Kenworth T300
MD5255	Bug Deflector, Kenworth T370

EMBLEM ACCENT TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.



Table 7-3: T300/ T370 - Emblem Accent Trim

Part No.	Description
MD4445	Emblem Accent Trim, Kenworth T370/ T660

FENDER/ HEADLIGHT TRIM

Attaches using supplied 3M two-sided tape. Sold as a 3-piece set.



Table 7-4: T300/ T370 - Fender/ Headlight Trim

Part No.	Description
MD3042	Fender/ Headlight Trim, Kenworth T370, 2012 & Later



8

UNIVERSAL PARTS

***Proven, reliable and
always innovative.***

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



UNIVERSAL PARTS

BATTERY/ TOOLBOX BOTTOM STEP & TOOLBOX COVER

The 45" x 8.5" tool box cover is designed to bolt on top of OEM aluminum checker-plate. Gives a stainless appearance to the lower battery/ toolbox area. Ideal for placement of permit stickers. Mounts using supplied hardware. Sold individually. The 39.5" Bottom Step is made with an aggressive tread pattern on steps. Mounts using supplied hardware. Sold individually.



Table 8-1: Universal Parts - Battery/ Tool Box Cover

Part no.	Description
MD3027	Bottom Step, For 39.5" Battery/ Toolbox, Kenworth
MD481	Tool Box Cover, Kenworth - 45" X 8.5", Bolt Over OEM Checker Plate

BATTERY/ TOOLBOX END COVERS & HANGERS

Battery/ Toolbox covers go over the ends of your battery box. Attaches with 3M two-sided tape and supplied hardware. Sold as a 4-piece set. Hangers replace OEM bottom step hanger. Hardware supplied. MD4244 is sold as a 4-piece set and MD0142 is sold as a 2-piece set.

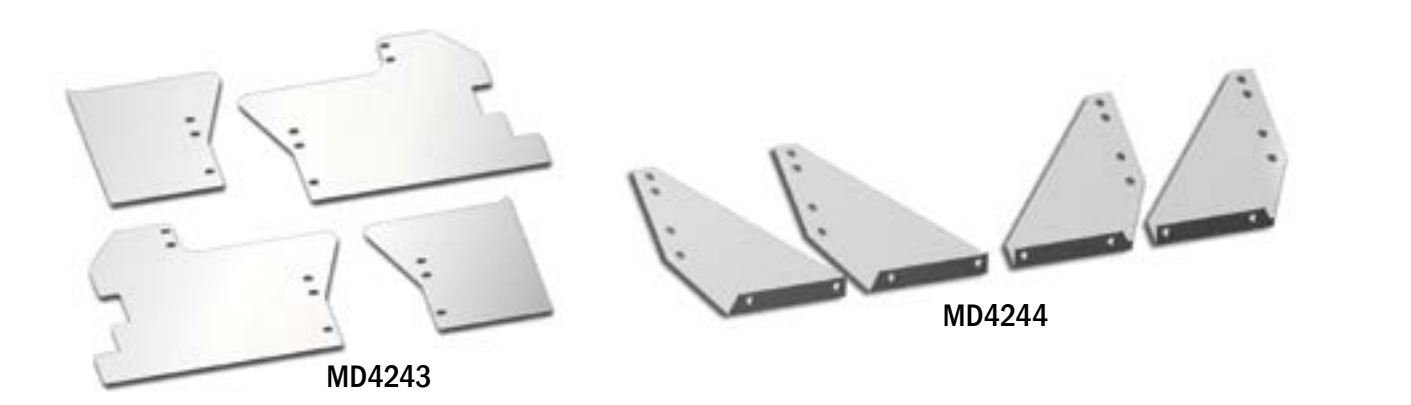


Table 8-2: Universal Parts - Battery/ Tool Box End Covers & Hangers

Part no.	Description
MD4243	Battery/ Tool Box End Covers, Modular, Kenworth, 2005 & Later - 45" Long
MD4244	Battery/ Tool Box Hangers, Modular, Kenworth, 2005 & Later - 45" Long
MD0142	Battery/ Tool Box Lower Step Hangers, Modular, Kenworth 2005 & Later - 45" Long

BACK UP LIGHT SHIELD

Adds a stainless steel look and style to your backup lights. Both ends are open. Attaches using existing hardware. Sold in pairs.



Table 8-3: Universal Parts - Back Up Light Shield

Part no.	Description
MD1446	Back Up Light Shield, Kenworth

BUMPER LIGHT BARS

Designed and contoured to bolt to a Texas Style Bumper. Approximately 94" long by 4" wide. Lights, hardware and harnesses included. Drilling of bumper and/or light bar required. Sold individually.



Table 8-4: Universal Parts - Bumper Light Bars

Part no.	Description
MD0150	Bumper Light Bar, for Texas Style Bumper, Back Closed, Kenworth - X2AG2 Lights (10-count LED)



X2AG2 = Amber Light with an Amber Lens.

BUNK VENT RING & COVER

Both attach using 3M two-sided tape and are sold individually.



MD656



MD656



MD657

Table 8-5: Universal Parts - Bunk Vent Ring & Cover

Part no.	Description
MD656	Bunk Vent Cover, Aerocab Kenworth
MD657	Bunk Vent Ring, Aerocab Kenworth - with Rivet Dimples

DECK PLATE

Can be purchased in 7" x 32" sections. All hardware included. Sold individually

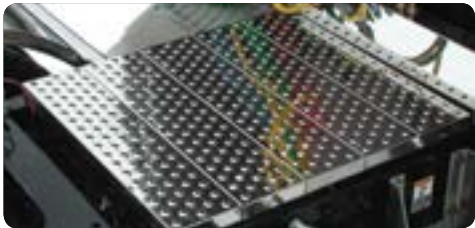


Table 8-6: Universal Parts - Deck Plate

Part no.	Description
MD0160	Deck Plate, Kenworth - Stainless Steel, 7" X 32"

DOOR LATCH TRIM, SURROUND, AND CHROME COVER

A stainless steel accent to highlight and protect door handles. Door latch trim and bay door covers can be purchased as a pair or individually. Door latch trim surround is sold in pairs. The door bay covers are compression fit, but silicone is recommended (not supplied).



Table 8-7: Universal Parts - Door Latch Trim, Surround, and Chrome Cover

Part no.	Description
MD535	Door Latch Trim, Kenworth, 2005 & Later
MD595	Door Latch Trim, Driver Side Bunk Door, Kenworth, 2005 & Later
MD536	Door Latch Trim Surround, Kenworth, 2005 & Later
MD2275	Chromed Door Bay Cover, Pair, Kenworth
MD2275L	Chromed Door Bay Cover, Left Side Replacement, Kenworth
MD2275R	Chromed Door Bay Cover, Right Side Replacement, Kenworth

DOOR TOP CAP PANELS

The door top cap mounts above the driver and passenger windows using 3M two-sided tape. Designed to fit all models, except T680, T700, and T2000. Sold in pairs.



Table 8-8: Universal Parts - Door Top Cap Panels

Part no.	Description
MD3026	Door Top Cap, Kenworth (will not fit T680, T700, T2000) - With Dimples

DOOR WINDOW DEFLECTORS

Helps reduce cab air turbulence. No hardware required, attaches using 3M two-sided tape. Sold in pairs.



Table 8-9: Universal Parts - Door Window Deflector

Part no.	Description
MD1548	Door Window Deflector, Kenworth

DOOR WINDOW SHADES

Designed to fit all models except T680, T700 & T2000. Attaches using 3M two-sided tape and optional hardware. Sold in pairs.



MD5271



MD5271

Table 8-10: Universal Parts - Door Window Shades

Part no.	Description
MD5271	Door Window Shade, with Mirror Cutout, Kenworth, with Daylight Doors - Stainless Steel
MD5256	Door Window Shade, without Mirror Cutout, Kenworth, with Daylight Doors - Stainless Steel

FENDER TRIM

Add that chrome shine to fenders using this chromed fender trim. 3/8" wide. Sold in 15' lengths. Attaches using supplied 3M two-sided tape.



Table 8-11: Universal Parts - Fender Trim

Part no.	Description
MD1826	Fender Trim, Kenworth - 15 Feet Long, 3/ 8" Wide

FUEL TANK SKIRTS

Redesigned for easier installation. Hides "J" bracket ends under fuel tanks. Mounts to "J" bracket ends. All hardware and brackets included. Sold individually.



MD5634



MD5634

Table 8-12: Universal Parts - Fuel Tank Skirts

Part no.	Description
MD5634	Fuel Tank Skirt, 6" Low Profile, Kenworth - Plain, 48" Long
MD5635	Fuel Tank Skirt, 6" Low Profile, Driver Side, Kenworth - with Flames, 48" Long
MD5636	Fuel Tank Skirt, 6" Low Profile, Passenger Side, Kenworth - with Flames, 48" Long
MD1407	Fuel Tank Skirt, 6" Low Profile, Kenworth - Plain, 59" Long
MD1408	Fuel Tank Skirt, 6" Low Profile, Kenworth - Plain, 66" Long
MD1409	Fuel Tank Skirt, 6" Low Profile, Kenworth - Plain, 73" Long
MD5637	Fuel Tank Skirt, 9" Profile, Kenworth - Plain, 48" Long
MD5638	Fuel Tank Skirt, 9" Profile, Driver Side, Kenworth - with Flames, 48" Long
MD5639	Fuel Tank Skirt, 9" Profile, Passenger Side, Kenworth - with Flames, 48" Long
MD1612	Fuel Tank Skirt, 9" Profile, Kenworth - Plain, 59" Long
MD1613	Fuel Tank Skirt, 9" Profile, Kenworth - Plain, 66" Long
MD1614	Fuel Tank Skirt, 9" Profile, Kenworth - Plain, 73" Long

HEADLIGHT VISORS

Attaches using existing hardware. Sold in pairs.



MD1512



MD1512

Table 8-13: Universal Parts - Headlight Visors

Part no.	Description
MD1512	Headlight Visor, Double Headlight, Kenworth - Plain
MD1082	Headlight Visor, Double Headlight, Kenworth - with Flames
MD1519	Headlight Visor, Single Headlight, Kenworth - Plain

Hood Emblem Accents & Surrounds

Attaches below or around your Kenworth hood emblem using supplied hardware and 3M two-sided tape. Sold in pairs. MD0134 uses only 3M two-sided tape to attach.



MD0134




MD3101



MD3100



MD0134

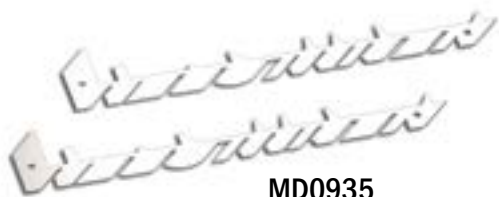

MD0935

Universal Parts - Hood Emblem Accents & Surrounds

Part no.	Description
MD3101	Hood Emblem Accent, Kenworth - Plain
MD3100	Hood Emblem Accent, Kenworth - with 2 Cutouts
MD0134	Hood Emblem Surround, Kenworth - Flames
MD0935	Hood Emblem Accent, Kenworth - 3D

Hood Wing

Dress up your hood with a polished stainless steel wing. Drilling of hood required. All hardware included. Sold individually.



Table 8-14: Universal Parts - Hood Wing

Part no.	Description
MD1559	Hood Wing, Kenworth

INTERIOR ACCESSORIES

The full climate control knob/ vent/ cup interior kit includes: Chromed Cup Holder (MC4362), Chromed Louvered Vents x3 (MD4363) & Chromed Climate Control Knob Heads - In sets of 3 (MD4364). Sold as a 8-piece kit. Vent Louver replaces existing factory vent. Sold individually. Shifter Base Plate attaches using existing hardware. Sold individually.



MD4363



MC4377




MC1003

Table 8-15: Universal Parts - Interior Accessories

Part no.	Description
MC4377	Full Control Knob/ Vent Louver/ Cup Interior Kit, Kenworth - Chrome
MD4364	Climate Control Knob Head, Kenworth - Set Of 3, Chrome
MC4362	Dual Cup Holder Receptacle, Kenworth - Chrome
MD4363	Vent Louver, Kenworth - Chrome
MC1003	Shifter Base Plate, Kenworth - with Cutouts "Kenworth World's Best"
MC1004	Shifter Base Plate, Kenworth - Logo Shaped

LICENSE PLATE/ SWING PLATE

Manufactured from a heavy gauge stainless steel to better resist road debris and damage. No drilling required. Hardware and license plate bezels included. Sold individually.

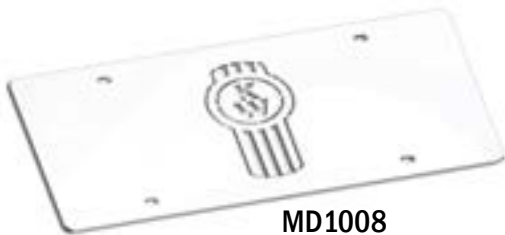

MD1008



MD1501

Table 8-16: Universal Parts -License Plate/ Swing Plate

Part no.	Description
MD1008	License Plate, Kenworth - with Logo Cutout
MD1501	License Plate/ Swing Plate, Kenworth - Under Bumper with 1 Plate
MD1504	License Plate/ Swing Plate, Kenworth - Under Bumper with 2 Plates
MD1507	License Plate/ Swing Plate, Kenworth - Under Bumper with 3 Plates

LIGHT BARS

Designed to hang by the 2" lip, bolts to any desired area (i.e. bumper). 4" wide. Lights, hardware and harnesses included. Sold individually.



MD1582



MD1581



MD0144

Table 8-17: Universal Parts - Light Bars

Part no.	Description
MD0145	Light Bar, Kenworth - X2AG2 Light (1-count LED), 8" Long
MD0146	Light Bar, Kenworth - X2AG2 Lights (2-count LED), 15-1/ 4" Long
MD0147	Light Bar, Kenworth - X2AG2 Lights (3-count LED), 22-1/ 2" Long
MD0144	Light Bar, Kenworth - X2AG2 Lights (5-count LED), 37-1/ 4" Long
MD1580	Light Bar, Kenworth - Oval Light (1-count Incandescent), 9-1/ 4" Long
MD1581	Light Bar, Kenworth - Oval Lights (2-count Incandescent), 18" Long
MD1582	Light Bar, Kenworth - Oval Lights (3-count Incandescent), 26-1/ 4" Long
MD1583	Light Bar, Kenworth - Oval Lights (4-count Incandescent), 34-1/ 2" Long



X2AG2 = Amber Light with an Amber Lens.

MIRROR BRACKET REPLACEMENT KIT

Kit Includes MD1440, MD1441, MD1442 - Stainless steel mirror brackets. Replaces OEM painted brackets. Available individually or as a kit. Uses existing hardware.



MD1440



MD1441



MD1442

Table 8-18: Universal Parts - Mirror Brackets

Part no.	Description
MD1443	Mirror Bracket Kit, Stainless Steel Mirror Arm - Includes (MD1440, MD1441, MD1442)
MD1440	Mirror Bracket, Stainless Steel Mirror for OEM K053-925BL & K053-925BR - Replaces OEM Bracket
MD1441	Mirror Bracket, Stainless Steel Mirror for OEM K053-556L & K053-556R - Replaces OEM Bracket
MD1442	Mirror Bracket, Stainless Steel Mirror for OEM K053-805L & K053-805R - Replaces OEM Bracket

PASSENGER DOOR WINDOW TRIM

Attaches with supplied silicon. Sold individually.



Table 8-19: Universal Parts - Passenger Door Window Trim

Part no.	Description
MD5253	Passenger Window Trim, W900/ T800/ T440 Kenworth

REAR CENTER LIGHT BOX

Mounts to underside of frame. 34" wide. Corners are welded and polished. Rear of light box has a removable cover. Lights and hardware included, some wiring supplied. Sold individually.



MD1586



MD1586



MD1359

Table 8-20: Universal Parts - Rear Center Light Box

Part no.	Description
MD5430	Rear Center Light Box, Kenworth - with 4" LED Round Lights
MD1586	Rear Center Light Box, Kenworth - with 4" Incandescent Round Lights
MD1359	Rear Center Light Box, Kenworth - 6" Oval Lights

REAR FRAME COVERS & PANELS

Rear Frame Covers attach using supplied 3M two-sided tape and hardware. Rear Frame Panels attach using supplied hardware. Both Rear Frame Covers and Panels are sold individually.



MD5431



MD0125



MD5431

Table 8-21: Universal Parts - Rear Frame Covers & Panels

Part no.	Description
MD0125	Rear Frame Cover, Kenworth - Plain
MD0127	Rear Frame Cover, Kenworth - X2RG2 Lights (3-count LED)
MD1001	Rear Frame Panel, for 1 License Plate, Kenworth - with 4" Round Lights
MD5431	Rear Frame Panel, for 1 License Plate, Kenworth - with 4" LED Round Lights

REAR SLEEPER WINDOW SUNVISOR

The Rear SLEEPER Window Sunvisor attaches with supplied hardware and 3M two-sided tape. Sold individually.



Table 8-22: Universal Parts - Rear SLEEPER Window Sunvisor

Part no.	Description
MD4509	Rear SLEEPER Window Sunvisor, Kenworth, 2007 & Later - 39" SLEEPER Window

REVOLVING BEACON LIGHT BRACKETS

Rigid stainless steel construction. Drilling of roof required, uses existing hardware to attach. Sold in pairs.



MD1584



MD1585



MD1584

Table 8-23: Universal Parts - Revolving Beacon Light Brackets

Part no.	Description
MD1585	Revolving Beacon Light Brackets, Aerocab Kenworth - Rear Bunk
MD1584	Revolving Beacon Light Brackets, Modular Kenworth - Cab (Above Entrance Door)

SLEEPER EXTENDER RUBBER & BRACKET COVERS

MD5588 easily mounts to rubber extender moulding using existing hardware. Sold in pairs. Sleeper Extender Bracket Covers are for use with or without grab handle. Sold as a 4 piece set. Trim pieces bolt onto existing bunk extender brackets. Hardware included.



MD5744



MD5744



MD5249

Table 8-24: Universal Parts - Sleeper Extender Rubber & Bracket Covers

Part no.	Description
MD5588	Sleeper Extender Rubber Cover, Aerocab Kenworth - 66"
MD5744	Sleeper Extender Bracket Cover, for Use with Grab Handle, Aerocab Kenworth, 2012 & Later
MD5745	Sleeper Extender Bracket Cover, for Use without Grab Handle, Aerocab Kenworth, 2012 & Later - 4-Piece Set
MD5249	Sleeper Extender Bracket Cover, Rear Bunk, Aerocab Kenworth - 4-Piece Set

TRAILER SERVICE BOX

Mounts to the frame behind the cab or sleeper. Corners are welded and polished. 32" wide. Holes are provided for the light cable, ABS cable, and air line mounting. Mounting hardware and a hole cover are included. Sold individually.



Table 8-25: Universal Parts - Trailer Service Box

Part no.	Description
MD1587	Trailer Service Box, Kenworth

UNDER DOOR WINDOW TRIM

Trim follows the contour of the window and fastens using supplied 3M two-sided tape. Sold in pairs.



Table 8-26: Universal Parts - Under Window Trim

Part no.	Description
MD5284	Under Window Trim, Kenworth, 2008 & Later - with Daylight Doors

WINDOW TRIM

All window trim attaches with supplied silicon and are sold in pairs.



MD5414



MD5414



MD5413

Table 8-27: Universal Parts - Window Trim & Accessories

Part no.	Description
MD5618	Sleeper Window Trim, Upper Window, Kenworth, 2010 & Later - for 72" Studio Sleeper
MD5414	Sleeper Window Trim, Upper Window, Kenworth, 2008 & Later - for 86" Studio Sleeper
MD5413	Sleeper Window Trim, Lower Window, Kenworth, 2008 & Later - for 86" & 72" Studio Sleeper



SLEEPER SKIRTS

*Proven, reliable and
always innovative.*

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



SLEEPER SKIRTS

38" SLEEPER SKIRTS

Cab skirts must be purchased as a continuation of the sleeper skirt (see your truck model's cab skirt section). Hardware, lights and harnesses included. Sold in pairs.



MD5751



MD5754



MD5755



MD5757

Table 9-1: Sleeper Skirts - 38"

Part No.	Description
MD5750	Sleeper Skirt, 38", no Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - Plain
MD5751	Sleeper Skirt, 38", no Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2AG2 Lights (2-count LED)
MD5752	Sleeper Skirt, 38", no Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2ACG2 Lights (2-count LED)
MD5754	Sleeper Skirt, 38", no Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - 2" Starburst Lights (2-count LED)
MD5753	Sleeper Skirt, 38", no Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - 2" Round Light Holes (2-count)
MD5755	Sleeper Skirt, 38", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - Plain
MD5756	Sleeper Skirt, 38", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2AG2 Lights (2-count LED)
MD5757	Sleeper Skirt, 38", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2ACG2 Lights (2-count LED)
MD5759	Sleeper Skirt, 38", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - 2" Starburst Lights (3-count LED)
MD5758	Sleeper Skirt, 38", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - 2" Round Light Holes (3-count)



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.



2" Round Light = Amber Light with an Amber Lens.

60" & 62" SLEEPER SKIRTS

Cab skirts must be purchased as a continuation of the sleeper skirt (see your truck model's cab skirt section). Hardware, lights and harnesses included. Sold in pairs.



Table 9-2: Sleeper Skirts - 60" & 62"

Part No.	Description
MD1591	Sleeper Skirt, 60", no Extender, Kenworth W900 (Modular) - Plain
MD0167	Sleeper Skirt, 60", no Extender, Kenworth W900 (Modular) - X2AG2 Lights (4-count LED)
MD5420	Sleeper Skirt, 62", no Extender, Side Mount Exhaust, Kenworth T800/ W900 (Aerocab), 2007 & Later - Plain
MD5421	Sleeper Skirt, 62", no Extender, Side Mount Exhaust, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2AG2 Lights (3-count LED)
MD5422	Sleeper Skirt, 62", no Extender, Side Mount Exhaust, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2ACG2 Lights (3-count LED)
MD5424	Sleeper Skirt, 62", no Extender, Side Mount Exhaust, Kenworth T800/ W900 (Aerocab), 2007 & Later - 2" Round Lights (4-count LED)
MD5425	Sleeper Skirt, 62", Use with Extender, Side Mount Exhaust, Kenworth T800/ W900 (Aerocab), 2007 & Later - Plain
MD5426	Sleeper Skirt, 62", Use with Extender, Side Mount Exhaust, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2AG2 Lights (4-count LED)
MD5427	Sleeper Skirt, 62", Use with Extender, Side Mount Exhaust, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2ACG2 Lights (4-count LED)



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.



2" Round Light = Amber Light with an Amber Lens.

72" & 86" SLEEPER SKIRTS

Cab skirts must be purchased as a continuation of the sleeper skirt (see your truck model's cab skirt section). Hardware, lights and harnesses included. Sold in pairs.

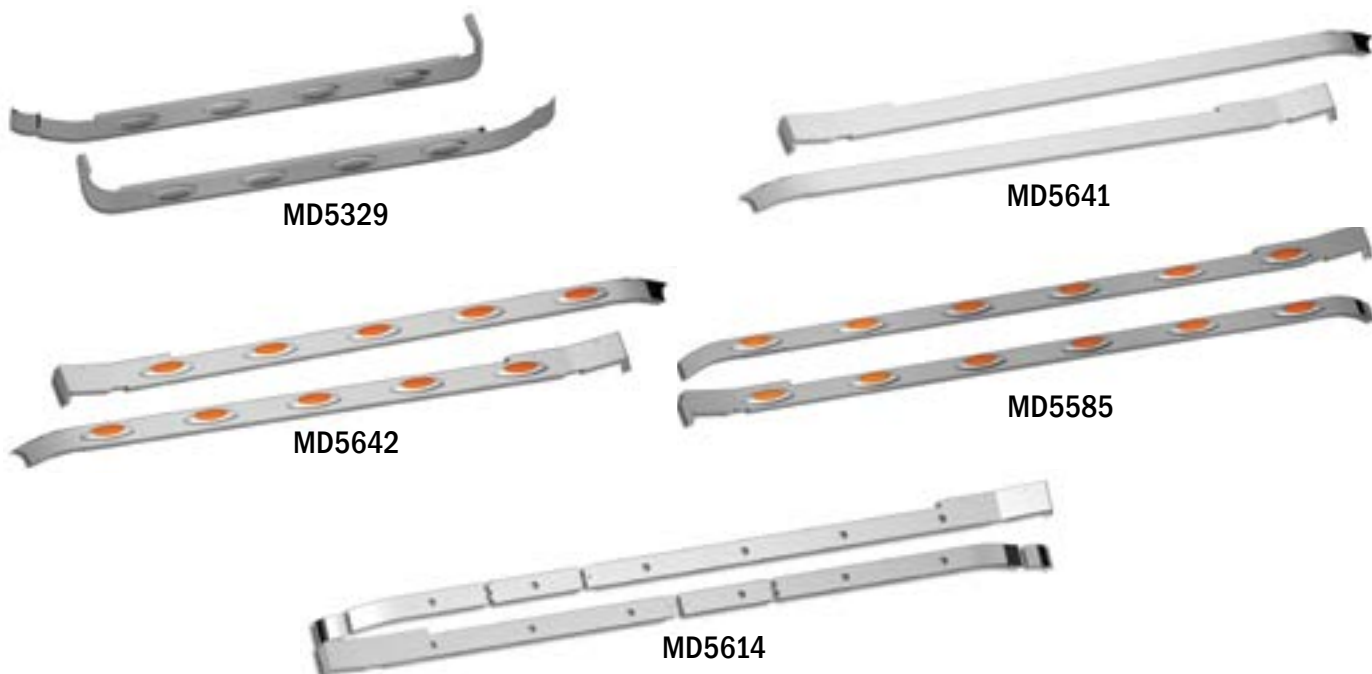


Table 9-3: Sleeper Skirts - 72" & 86"

Part no.	Description
MD5327	Sleeper Skirt, 72", no Extender, Kenworth T800/ W900 (Aerocab), 2008 & Later - Plain
MD5328	Sleeper Skirt, 72", no Extender, Kenworth T800/ W900 (Aerocab), 2008 & Later - X2AG2 Lights (4-count LED)
MD5329	Sleeper Skirt, 72", no Extender, Kenworth T800/ W900 (Aerocab), 2008 & Later - X2ACG2 Lights (4-count LED)
MD5641	Sleeper Skirts, 72", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - Plain, 3 1/2" Wide
MD5642	Sleeper Skirts, 72", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2AG2 Lights (5-count LED), 3 1/2" Wide
MD5643	Sleeper Skirts, 72", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - X2ACG2 Lights (5-count LED), 3 1/2" Wide
MD5644	Sleeper Skirts, 72", with Extender, Kenworth T800/ W900 (Aerocab), 2007 & Later - 2" Round Light Holes (5-count), 3 1/2" Wide
MD5614	Sleeper Skirt, 86", with Fuel Door & Extender, Kenworth W900 (Aerocab), 2011 & Later - X2 Light Holes (6-count), 3" Wide
MD5763	Sleeper Skirt, 86", with Extender, Kenworth W900 (Aerocab), 2008 & Later - Plain 3" Wide
MD5585	Sleeper Skirt, 86", with Extender, Kenworth W900 (Aerocab), 2008 & Later - X2AG2 Lights (6-count LED), 3" Wide



X2AG2 = Amber Light with an Amber Lens.



X2ACG2 = Amber Light with a Clear Lens.



*Proven, reliable and
always innovative.*

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



SUNVISORS

FLAT GLASS SUNVISORS - REPLACES OEM STAINLESS STEEL SUNVISOR

An extra deep drop style stainless steel sunvisor designed to replace OEM one or two piece stainless steel sunvisor. All hardware included. Sold individually.



MD4436



MD4436



MD4294



MD1560



MD1561

Table 10-1: Sunvisors - Flat Glass

Part No.	Description
MD4436	Sunvisor, Standard Flat Glass, All Kenworth Models, 2007 & Later - 13" Drop Style, Plain, Replaces OEM Stainless Steel 1 Piece Visor
MD4294	Sunvisor, Standard Flat Glass, All Kenworth Models, 2007 & Later - 13" Drop Style, Plain, Replaces OEM Stainless Steel 2 Piece Visor
MD1560	Sunvisor, Standard Flat Glass, All Kenworth Models, 1998 To 2006 - 10-1/ 2" Drop Style, Plain, Replaces OEM Stainless Steel 2 Piece Visor
MD1561	Sunvisor, Standard Flat Glass, All Kenworth Models, 1993 To 1997 - 10-1/ 2" Drop Style, Plain, Replaces OEM Stainless Steel 2 Piece Visor

CURVED GLASS SUNVISORS - REPLACES OEM STAINLESS STEEL SUNVISOR

An extra deep drop style stainless steel sunvisor designed to replace OEM stainless steel sunvisor. All hardware included. Sold individually.



MD5409



MD4429



MD4435



MD1562



MD5409

SUNVISORS

Table 10-2: Sunvisors - Curved Glass

Part No.	Description
MD4429	Sunvisor, Curved Glass, All Kenworth Models, 2007 & Later - 13" Drop Style, with Flames, Replaces OEM Stainless Steel 1 Piece Visor
MD4435	Sunvisor, Curved Glass, All Kenworth Models, 2007 & Later - 10" Drop Style, Plain, Replaces OEM Stainless Steel 1 Piece Visor
MD1562	Sunvisor, Curved Glass, All Kenworth Models, 1998 To 2006 - 10-1/2" Drop Style, Plain, Replaces OEM Stainless Steel 2 Piece Visor
MD5409	Sunvisor, Boltless Bowtie, Curved Glass, All Kenworth Models, 1995 & Later - Plain, Replaces OEM Stainless Steel Visor

CURVED GLASS SUNVISORS - REPLACES COMPOSITE OEM SUNVISOR/ No SUNVISOR

MD1005 & MD5267 are extra deep extended sunvisors designed to replace lighted OEM composite sunvisor. MD1006 is designed for cabs without OEM sunvisors. No lights provided. All sunvisor mounting hardware is included. Sold individually.



MD5267



MD1005



MD5267



MD1006

Table 10-3: Sunvisors - Replaces Composite OEM/ No Sunvisor

Part No.	Description
MD1005	Sunvisor, Curved Glass, Kenworth T300/ T600/ T800 (Day Cab) - 12-1/ 2” Deep, Plain, with Light Holes, Replaces OEM Lighted Composite Visor
MD5267	Sunvisor, Curved Glass, Kenworth T660 (Sleeper Cab) - 12” Deep, Plain, with Light Holes, Replaces OEM Lighted Composite Visor
MD1006	Sunvisor, Curved Glass, Kenworth T300/ T600/ T800 - 10-1/ 2” Deep, Plain, for Trucks without OEM Sunvisor



Stainless Steel Accessories for Trucks

11 AIR CLEANER LIGHT BARS

*Proven, reliable and
always innovative.*

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



PRE 2010 AIR CLEANER LIGHT BARS - X3 LIGHTS

The air cleaner light bars attach to the brackets between the hood and cab using supplied hardware. Front center light bars mount to the center of the air cleaner using existing brackets. Sold in pairs.

FRONT AIR CLEANER LIGHT BARS

Table 11-1: Front Air Cleaner Light Bars - With X3 Lights (Pre 2010)

Part No.	Description
MD0563	Air Cleaner Light Bar, Front, Kenworth T800/ W900, Pre 2010, for Standard Can (Not for Use with Intake Shroud) - X3AG2 Lights (4-count LED), 13" Long
MD5440	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900B, Pre 2010, for Standard Can (13" Donaldson) - X3AG2 Lights (5-count LED), 17" Long
MD5441	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900B, Pre 2010, for Standard Can (13" Donaldson) - X3ACG2 Lights (5-count LED), 17" Long
MD5442	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900B, Pre 2010, for Standard Can (15" Donaldson) - X3AG2 Lights (5-count LED), 17" Long
MD5443	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900B, Pre 2010, for Standard Can (15" Donaldson) - X3ACG2 Lights (5-count LED), 17" Long
MD0247	Air Cleaner Light Bar, Front Center, Kenworth W900L, Pre 2010, for Standard Can - X3AG2 Lights (6-count LED), 21.75" Long
MD0568	Air Cleaner Light Bar, Front Center, Kenworth W900L, Pre 2010, for Standard Can - X3AG2 Lights (7-count LED), 21.75" Long
MD5444	Air Cleaner Light Bar, Front Center, Kenworth W900L, Pre 2010, for Standard Can - X3ACG2 Lights (7-count LED), 21.75" Long



MD0563



MD5443

REAR AIR CLEANER LIGHT BARS

Table 11-2: Rear Air Cleaner Light Bars - With X3 Lights (Pre 2010)

Part No.	Description
MD0724	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, Pre 2010, for Standard Can - X3RG2 Lights (4-count LED), 12.5" Long
MD0726	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, Pre 2010, for Standard Can - X3RG2 Lights (7-count LED), 21.875" Long
MD5445	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, Pre 2010, for Standard Can - X3RCG2 Lights (7-count LED), 21.875" Long



MD0726



X3AG2 = Amber Light with an Amber Lens.



X3RG2 = Red Light with a Red Lens.



X3ACG2 = Amber Light with a Clear Lens.



X3RCG2 = Red Light with a Clear Lens.

2010+ AIR CLEANER LIGHT BARS - X3 LIGHTS

Attaches using supplied hardware. Front center light bars mount to the center of the air cleaner using existing brackets. Sold in pairs. To determine whether your can is Premium or Standard, please refer to page 11-90.

FRONT AIR CLEANER LIGHT BARS

Table 11-3: Front Air Cleaner Light Bars - With X3 Lights (2010+)

Part No.	Description
MD640	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Premium Can (Flangeless) - X3AG2 Lights (7-count LED), 22-3/ 8" Long
MD641	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Premium Can (Flangeless) - X3ACG2 Lights (7-count LED), 22-3/ 8" Long
MD3033	Air Cleaner Light Bar, Front Center, Kenworth T800, 2010 & Later, for Premium Can (Flangeless) - X3AG2 Lights (7-count LED)
MD3034	Air Cleaner Light Bar, Front Center, Kenworth T800, 2010 & Later, for Premium Can (Flangeless) - X3ACG2 Lights (7-count LED)
MD5784	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - X3AG2 Lights (5-count LED), 19" Long
MD5785	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - X3ACG2 Lights (5-count LED), 19" Long
MD5787	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - X3AG2 Lights (5-count LED), 19" Long
MD5788	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - X3ACG2 Lights (5-count LED), 19" Long



MD640



MD5784

REAR AIR CLEANER LIGHT BARS

Table 11-4: Rear Air Cleaner Light Bars - With X3 Lights (2010+)

Part No.	Description
MD643	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Premium Can (Flangeless) - X3RG2 Lights (7-count LED), 22-3/ 8" Long
MD644	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Premium Can (Flangeless) - X3RCG2 Lights (7-count LED), 22-3/ 8" Long
MD5790	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - X3RG2 Lights (5-count LED), 19" Long
MD5791	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - X3RCG2 Lights (5-count LED), 19" Long
MD5793	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - X3RG2 Lights (5-count LED), 19" Long
MD5794	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - X3RCG2 Lights (5-count LED), 19" Long



MD643



MD5793



X3AG2 = Amber Light with an Amber Lens.



X3RG2 = Red Light with a Red Lens.



X3ACG2 = Amber Light with a Clear Lens.



X3RCG2 = Red Light with a Clear Lens.

PRE 2010 AIR CLEANER LIGHT BARS - 2" ROUND LIGHTS

All 2" round lights are Starburst LED. The air cleaner light bars attach to the brackets between the hood and cab using supplied hardware. Front Center light bars mount to the center of the air cleaner using existing brackets. Sold in pairs.

FRONT AIR CLEANER LIGHT BARS

2" Round = Amber Light with an Amber Lens. 2" Round Clear = Amber Light with a Clear Lens.

Table 11-5: Front Air Cleaner Light Bars - With 2" Round Lights (Pre 2010)



MD4321



MD4328

Part No.	Description
MD4320	Air Cleaner Light Bar, Front Center, Kenworth W900L, Pre 2010, for Standard Can (15" Donaldson) - 2" Round Lights (6-count LED) with Visor Bezels, 21" Long
MD4321	Air Cleaner Light Bar, Front Center, Kenworth W900L, Pre 2010, for Standard Can (15" Donaldson) - 2" Round Clear Lights (6-count LED) with Visor Bezels, 21" Long
MD4322	Air Cleaner Light Bar, Front Center, Kenworth W900B, Pre 2010, for Standard Can (13" Donaldson) - 2" Round Lights (5-count LED) with Visor Bezels, 17" Long
MD4323	Air Cleaner Light Bar, Front Center, Kenworth W900B, Pre 2010, for Standard Can (13" Donaldson) - 2" Round Clear Lights (5-count LED) with Visor Bezels, 17" Long
MD4326	Air Cleaner Light Bar, Front Center, Kenworth T800, Pre 2010, for Standard Can (13" Donaldson) - 2" Round Lights (5-count LED) with Visor Bezels, 17" Long
MD4327	Air Cleaner Light Bar, Front Center, Kenworth T800, Pre 2010, for Standard Can (13" Donaldson) - 2" Round Clear Lights (5-count LED) with Visor Bezels, 17" Long
MD4328	Air Cleaner Light Bar, Front Center, Kenworth T800, Pre 2010, for Standard Can (15" Donaldson) - 2" Round Lights (5-count LED) with Visor Bezels, 17" Long
MD4329	Air Cleaner Light Bar, Front Center, Kenworth T800, Pre 2010, for Standard Can (15" Donaldson) - 2" Round Clear Lights (5-count LED) with Visor Bezels, 17" Long

REAR AIR CLEANER LIGHT BARS

2" Round = Red Light with a Red Lens. 2" Round Clear = Red Light with a Clear Lens.

Table 11-6: Rear Air Cleaner Light Bars - With 2" Round Lights (Pre 2010)



MD4332

Part No.	Description
MD4330	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, Pre 2010, for Standard Can (13" Donaldson) - 2" Round Lights (5-count LED), with Bezels, 21" Long
MD4331	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, Pre 2010, for Standard Can (13" Donaldson) - 2" Round Clear Lights (5-count LED), with Bezels, 21" Long
MD4332	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, Pre 2010, for Standard Can (15" Donaldson) - 2" Round Lights (6-count LED), with Bezels, 21" Long
MD4333	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, Pre 2010, for Standard Can (15" Donaldson) - 2" Round Clear Lights (6-count LED), with Bezels, 21" Long



2" Round Light = Amber Light with an Amber Lens.

*Please note - Available with/ without Chrome Bezel



2" Round Light Clear = Amber Light with a Clear Lens.

*Please Note - Available with/ without Chrome Bezel



2" Round Light = Red Light with a Red Lens.

*Please note - Available with/ without Chrome Bezel



2" Round Light Clear = Red Light with a Clear Lens.

*Please Note - Available with/ without Chrome Bezel

2010+ AIR CLEANER LIGHT BARS - 2" ROUND LIGHTS

All 2" round lights are Starburst LED. The air cleaner light bars attach to the brackets between the hood and cab using supplied hardware. For use with standard cans only. Front Center light bars mount to the center of the air cleaner using existing brackets. Sold in pairs.

FRONT AIR CLEANER LIGHT BARS

2" Round = Amber Light with an Amber Lens. 2" Round Clear = Amber Light with a Clear Lens.

Table 11-7: Front Air Cleaner Light Bars - With 2" Round Lights (2010+)

Part No.	Description
MD5726	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - 2" Round Lights (5-count LED) with Visor Bezels, 19" Long
MD5727	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - 2" Round Clear Lights (5-count LED) with Visor Bezels, 19" Long
MD5730	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - 2" Round Lights (5-count LED) with Visor Bezels, 19" Long
MD5731	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - 2" Round Clear Lights (5-count LED) with Visor Bezels, 19" Long



MD5726

REAR AIR CLEANER LIGHT BARS

2" Round = Red Light with a Red Lens. 2" Round Clear = Red Light with a Clear Lens.

Table 11-8: Rear Air Cleaner Light Bars - With 2" Round Lights (2010+)

Part No.	Description
MD5734	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - 2" Round Lights (5-count LED) with Bezels, 19" Long
MD5735	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - 2" Round Clear Lights (5-count LED) with Bezels, 19" Long
MD5738	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - 2" Round Lights (5-count LED) with Bezels, 19" Long
MD5739	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - 2" Round Clear Lights (5-count LED) with Bezels, 19" Long



MD5734

AIR CLEANER LIGHTS



2" Round Light = Amber Light with an Amber Lens.

*Please note - Available with/ without Chrome Bezel



2" Round Light = Red Light with a Red Lens.

*Please note - Available with/ without Chrome Bezel



2" Round Light Clear = Amber Light with a Clear Lens.

*Please Note - Available with/ without Chrome Bezel



2" Round Light Clear = Red Light with a Clear Lens.

*Please Note - Available with/ without Chrome Bezel

PRE 2010 AIR CLEANER LIGHT BARS - 2" LIGHT HOLES

These air cleaner light bars DO NOT include lights or grommets. The air cleaner light bars attach to the brackets between the hood and cab using supplied hardware. Sold in pairs.

FRONT AIR CLEANER LIGHT BARS

Table 11-9: Front Air Cleaner Light Bars - With 2" Round Light Holes (Pre 2010)

Part No.	Description
MD1805	Air Cleaner Light Bar, Front, Kenworth T800/ W900, for Standard Can (15" Donaldson) - 2" Round Light Holes (4-count), 12" Long
MD1802	Air Cleaner Light Bar, Front Center, Kenworth W900L, for Standard Can (13" Donaldson) - 2" Round Light Holes (5-count), 21" Long
MD1806	Air Cleaner Light Bar, Front Center, Kenworth W900L, for Standard Can (15" Donaldson) - 2" Round Light Holes (6-count), 21" Long
MD1809	Air Cleaner Light Bar, Front Center, Kenworth W900L, for Standard Can (for Farr Air Cleaners) - 2" Round Light Holes (6-count), 24" Long
MD1804	Air Cleaner Light Bar, Front Center, Kenworth W900B, for Standard Can (13" Donaldson) - 2" Round Light Holes (5-count), 17" Long
MD1808	Air Cleaner Light Bar, Front Center, Kenworth W900B, for Standard Can (15" Donaldson) - 2" Round Light Holes (5-count), 17" long
MD1803	Air Cleaner Light Bar, Front Center, Kenworth T800 Split Fender, for Standard Can (13" Donaldson) - 2" Round Light Holes (5-count), 17" Long
MD1807	Air Cleaner Light Bar, Front Center, Kenworth T800 Split Fender, for Standard Can (15" Donaldson) - 2" Round Light Holes (5-count) , 17" Long



MD1805



MD1806

REAR AIR CLEANER LIGHT BARS

Table 11-10: Rear Air Cleaner Light Bars - With 2" Round Light Holes (Pre 2010)

Part No.	Description
MD1817	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, for Standard Can (13" Donaldson) - 2" Round Light Holes (5-count), 21" Long
MD1818	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, for Standard Can (15" Donaldson) - 2" Round Light Holes (6-count), 21" Long



MD1817

2010+ AIR CLEANER LIGHT BARS - 2" LIGHT HOLES

These air cleaner light bars DO NOT include lights or grommets. The air cleaner light bars attach to the brackets between the hood and cab using supplied hardware. Sold in pairs. To determine whether your can is Premium or Standard, please reference page 11-90.

FRONT AIR CLEANER LIGHT BARS

Table 11-11: Front Air Cleaner Light Bars - With 2" Round Light Holes (2010+)

Part No.	Description
MD642	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Premium Can (Flangeless) - 2" Round Light Holes (6-count), 22-3/ 8" Long
MD3032	Air Cleaner Light Bar, Front, Kenworth T800 (Set Forward Axle), 2010 & Later, for Premium Can (Flangeless) - 2" Round Light Holes Lights (7-count), 22.19" Long
MD5729	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - 2" Round Light Holes (5-count), 19" Long
MD5733	Air Cleaner Light Bar, Front Center, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - 2" Round Light Holes (5-count), 19" Long



MD642

REAR AIR CLEANER LIGHT BARS

Table 11-12: Rear Air Cleaner Light Bars - With 2" Round Light Holes (2010+)

Part No.	Description
MD645	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Premium Can (Flangeless) - 2" Round Light Holes (6-count), 22-3/ 8" Long
MD5737	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (13" Donaldson) - 2" Round Light Holes (5-count), 19" Long
MD5741	Air Cleaner Light Bar, Rear, Kenworth T800/ W900, 2010 & Later, for Standard Can (15" Donaldson) - 2" Round Light Holes (5-count), 19" Long



MD645

AIR CLEANER LIGHTS

To determine your type of can look at the top of the air cleaner (where the cover meets the can), if there is a flange your can is a Standard Can if it is flat with no flange it is a Premium Can.



NOTES

[illegible]

NOTES

NOTES

NOTES

This image shows a full page of blank graph paper. The grid consists of thin, light gray horizontal and vertical lines that intersect to form small squares across the entire surface. There are no margins, text, or other markings on the paper.

NOTES

NOTES



Stainless Steel Accessories for Trucks

12

PRODUCT INDEX

*Proven, reliable and
always innovative.*

TRP® offers reliable aftermarket products that are designed and tested to exceed customers' expectations regardless of the truck make, model or age.



PRODUCT INDEX BY NUMERICAL VALUE

Part Numbers MD0125 - MD0563

Part #	Page#
MD0125	8-71
MD0127	8-71
MD0134	8-67
MD0142	8-60
MD0144	8-69
MD0145	8-69
MD0146	8-69
MD0147	8-69
MD0150	8-61
MD0160	8-62
MD0167	9-77
MD0172	6-45
MD0175	1-12
MD0178	1-12
MD0181	1-12
MD0184	6-45
MD0194	1-12
MD0198	1-12
MD0199	1-12
MD0200	1-12
MD0225	6-48
MD0247	11-84
MD0357	6-52
MD405	6-50
MD406	6-50
MD481	8-60
MD535	8-63
MD536	8-63
MD543	6-45
MD545	6-45
MD549	1-12
MD551	1-12
MD0563	11-84

Part Numbers MD0568 - MD0686

Part #	Page#
MD0568	11-84
MD595	8-63
MD596	6-53
MD597	6-53
MD600	5-41
MD601	5-42
MD602	5-42
MD603	5-42
MD608	6-46
MD609	6-46
MD610	6-46
MD611	6-47
MD612	6-47
MD613	6-47
MD640	11-85
MD641	11-85
MD642	11-89
MD643	11-85
MD644	11-85
MD645	11-89
MD656	8-62
MD657	8-62
MD663	3-28
MD665	3-30
MD666	3-30
MD680	3-30
MD681	3-30
MD682	3-26
MD683	3-26
MD684	3-26
MD685	3-30
MD686	3-30
MD0686	6-51

Part Numbers MD687 - MD1442

Part #	Page#
MD687	3-30
MD688	3-26
MD689	3-26
MD690	3-26
MD691	3-27
MD692	3-26
MD0724	11-84
MD0726	11-84
MD0879	1-14
MD0882	1-8
MD0935	8-67
MD1001	8-71
MC1003	8-68
MC1004	8-68
MD1005	10-82
MD1006	10-82
MD1007	7-56
MD1008	8-68
MD1082	8-66
MD1344	2-19
MD1353	2-22
MD1356	2-20
MD1359	8-70
MD1404	1-8 6-44
MD1405	1-8 6-44
MD1407	8-66
MD1408	8-66
MD1409	8-66
MD1440	8-69
MD1441	8-69
MD1442	8-69

Part Numbers MD1443 - MD1551

Part #	Page#
MD1443	8-69
MD1444	1-8
MD1446	8-61
MD1448	6-53
MD1457	6-54
MD1500	6-52
MD1501	8-68
MD1502	6-52
MD1503	6-52
MD1504	8-68
MD1505	6-52
MD1506	6-52
MD1507	8-68
MD1508	6-52
MD1509	1-15
MD1510	6-50
MD1511	6-50
MD1512	8-66
MD1513	6-54
MD1514	6-48
MD1516	1-13
MD1517	1-16
MD1519	8-66
MD1541	6-45
MD1542	6-45
MD1543	1-9
MD1544	1-9
MD1546	6-51
MD1547	1-15
MD1548	8-64
MD1549	6-49
MD1550	6-49
MD1551	6-49

PRODUCT INDEX BY NUMERICAL VALUE

Part Numbers MD1552 - MD1806

Part #	Page#
MD1552	6-49
MD1553	1-14
MD1559	8-67
MD1560	10-80
MD1561	10-80
MD1562	10-81
MD1570	6-49
MD1571	6-49
MD1572	6-49
MD1573	1-14
MD1574	1-14
MD1575	1-13
MD1576	1-13
MD1580	8-69
MD1581	8-69
MD1582	8-69
MD1583	8-69
MD1584	8-72
MD1585	8-72
MD1586	8-70
MD1587	8-73
MD1591	9-77
MD1606	6-45
MD1612	8-66
MD1613	8-66
MD1614	8-66
MD1784	6-51
MD1785	6-53
MD1802	11-88
MD1803	11-88
MD1804	11-88
MD1805	11-88
MD1806	11-88

Part Numbers MD1807 - MD4321

Part #	Page#
MD1807	11-88
MD1808	11-88
MD1809	11-88
MD1817	11-88
MD1818	11-88
MD1826	8-65
MD2275	8-63
MD2275L	8-63
MD2275R	8-63
MD3000	6-49
MD3001	3-27
MD3003	3-27
MD3018	3-28
MD3019	3-28
MD3022	1-9
MD3026	8-64
MD3027	8-60
MD3028	3-29
MD3032	11-89
MD3033	11-85
MD3034	11-85
MD3039	1-10
MD3040	1-10
MD3041	1-10
MD3042	7-58
MD3075	6-49
MD3100	8-67
MD3101	8-67
MD4243	8-60
MD4244	8-60
MD4294	10-80
MD4320	11-86
MD4321	11-86

Part Numbers MD4322 - MD4510

Part #	Page#
MD4322	11-86
MD4323	11-86
MD4326	11-86
MD4327	11-86
MD4328	11-86
MD4329	11-86
MD4330	11-86
MD4331	11-86
MD4332	11-86
MD4333	11-86
MC4362	8-68
MD4363	8-68
MC4364	8-68
MC4377	8-68
MD4429	10-81
MD4435	10-81
MD4436	10-80
MD4440	5-36
	2-23
MD4443	3-29
	5-38
	2-23
MD4444	3-29
	5-38
MD4445	5-37
	7-57
MD4446	5-38
MD4447	5-38
MD4448	4-33
	5-37
MD4455	1-9
MD4509	8-71
MD4510	1-14

Part Numbers MD5249 - MD5421

Part #	Page#
MD5249	8-72
MD5253	8-70
MD5255	7-57
MD5256	8-65
MD5267	10-82
MD5268	5-41
MD5269	5-41
MD5271	8-65
MD5284	8-73
MD5327	9-78
MD5328	9-78
MD5329	9-78
MD5381	1-13
MD5384	1-10
MD5385	1-10
MD5386	1-10
MD5387	1-10
MD5388	1-10
MD5389	1-10
MD5390	1-10
MD5391	1-10
MD5396	6-48
MD5409	10-81
MD5410	5-42
MD5411	5-42
MD5413	8-74
MD5414	8-74
MD5415	5-36
	7-56
MD5416	5-37
MD5417	5-39
MD5420	9-77
MD5421	9-77

PRODUCT INDEX BY NUMERICAL VALUE

Part Numbers MD5422- MD5628

Part #	Page#
MD5422	9-77
MD5424	9-77
MD5425	9-77
MD5426	9-77
MD5427	9-77
MD5430	8-70
MD5431	8-71
MD5432	5-38
MD5435	9-78
MD5436	9-78
MD5437	9-78
MD5440	11-84
MD5441	11-84
MD5442	11-84
MD5443	11-84
MD5444	11-84
MD5445	11-84
MD5451	5-41
MD5585	9-78
MD5586	6-49
MD5588	8-72
MD5612	6-44
MD5614	9-78
MD5616	5-41
MD5617	5-41
MD5618	8-74
MD5619	5-41
MD5620	5-41
MD5621	5-41
MD5622	5-41
MD5626	6-54
MD5627	6-54
MD5628	6-54

Part Numbers MD5630 - MD5684

Part #	Page#
MD5630	1-11
MD5631	1-11
MD5632	1-11
MD5633	1-11
MD5634	8-66
MD5635	8-66
MD5636	8-66
MD5637	8-66
MD5638	8-66
MD5639	8-66
MD5661	6-51
MD5662	6-46
MD5663	6-46
MD5664	6-46
MD5665	6-46
MD5667	5-42
MD5668	5-42
MD5669	5-42
MD5670	5-42
MD5671	6-46
MD5672	6-46
MD5673	6-46
MD5674	6-46
MD5675	2-23
MD5676	2-23
MD5677	2-23
MD5678	2-23
MD5679	2-20
MD5680	2-18
MD5681	2-21
MD5682	2-18
MD5683	2-21
MD5684	2-24

Part Numbers MD5685- MD5754

Part #	Page#
MD5685	2-19
MD5686	2-22
MD5687	2-24
MD5689	2-18
MD5697	1-14
MD5698	1-14
MD5699	1-14
MD5726	11-87
MD5727	11-87
MD5729	11-89
MD5730	11-87
MD5731	11-87
MD5733	11-89
MD5734	11-87
MD5735	11-87
MD5737	11-89
MD5738	11-87
MD5739	11-87
MD5741	11-89
MD5742	6-46
MD5743	5-40 6-53
MD5744	8-72
MD5745	8-72
MD5746	4-32
MD5747	4-33
MD5748	4-32
MD5749	4-34
MD5750	9-76
MD5751	9-76
MD5752	9-76
MD5753	9-76
MD5754	9-76

Part Numbers MD5755 - MD5796

Part #	Page#
MD5755	9-76
MD5756	9-76
MD5757	9-76
MD5758	9-76
MD5759	9-76
MD5761	5-39
MD5762	5-39
MD5763	9-78
MD5764	1-11
MD5765	1-11
MD5766	1-11
MD5767	1-11
MD5768	5-42
MD5769	5-42
MD5774	6-47
MD5775	6-47
MD5776	6-47
MD5777	6-47
MD5778	5-38
MD5779	6-47
MD5780	6-47
MD5781	6-47
MD5782	6-47
MD5784	11-85
MD5785	11-85
MD5787	11-85
MD5788	11-85
MD5790	11-85
MD5791	11-85
MD5793	11-85
MD5794	11-85
MD5795	5-40
MD5796	5-40

PRODUCT INDEX BY NUMERICAL VALUE

Part Numbers
MD5798-MD5799

Part #	Page#
MD5798	5-41
MD5799	5-41



*For information, updates, or corrections,
please contact us at
feedback@TRPParts.com*

*No part of this marketing material may be
reproduced in any manner without written
permission from TRP® North America.*

TRP® North America

750 Houser Way N.
Renton, WA 98057

www.TRPParts.com