

Installation Procedure:

1. Pull an original plastic cover out
2. Clean surface where a cover would be installed with provided alcohol wipes and allow surface to dry thoroughly
3. Wipe areas where 3M double side tapes would be placed with a provided promoter wipe (Figure 1)
4. Peel out the tapes and install the cover

Note: If the vent is installed on a plate, indicated two washers needs to be removed. It is recommended to wear silicon, before tighten the screws. (Figure 2)



Figure 1

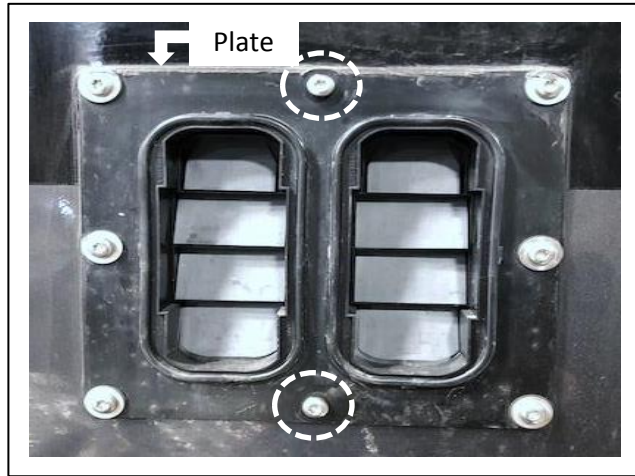


Figure 2

5. Peel all plastic out.
6. Repeat for the other side.