


99001 & IX FRONT A/C LIGHT BAR

INT

Panelite, Inc. · 275 Industrial Road · Cambridge, ON N3H 4R7 · Phone: 519-884-8555 · Toll Free: 1-877-884-8555 · FAX 519-884-8553 · website: www.panelite.com

INSTALLATION PROCEDURE:

- 1. Remove protective plastic from the brackets.
- 2. Assemble the brackets to the light bar as shown below with the supplied #10-32 x $\frac{1}{2}$ " bolts, nuts and washers. Finger tighten only, as they will need to be adjusted later.
- 3. Loosen the top two nuts on the air cleaner light bar
- 4. Slide the light bar assembly underneath the nuts, adjust the position and tighten slightly.
- 5. Using a pen, trace the mounting holes on the bottom bracket onto the air cleaner.
- 6. Remove the light bar and set aside.
- 7. Drill a 7/32" hole in each location marked with pen.
- 8. Re-attach the light bar and attach the lower bracket to the air cleaner using the supplied #10-32 x ½" bolts nuts and washers.
- 9. Tighten all bolts.
- 10. Remove the protective plastic coating from the light bar and clean with glass cleaner if necessary.

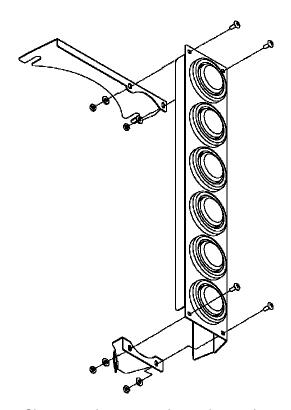

00813004

Caution: Sheet metal parts may have sharp edges