


Stainless Steel Accessories


SUNVISOR, FACTORY LIGHT HOLES (5), 5700XE, WESTERN STAR

INSTALLATION INSTRUCTIONS

1. Remove the OEM sunvisor. Retain fasteners, wiring harness and lights.
2. Peel back the plastic coating on the sunvisor in the areas of lights and bolt holes.
3. Fasten the lights (from step1) on to the stainless steel sunvisor.
4. Tuck the wiring harness into the notches on brackets CBD and CBP as shown.

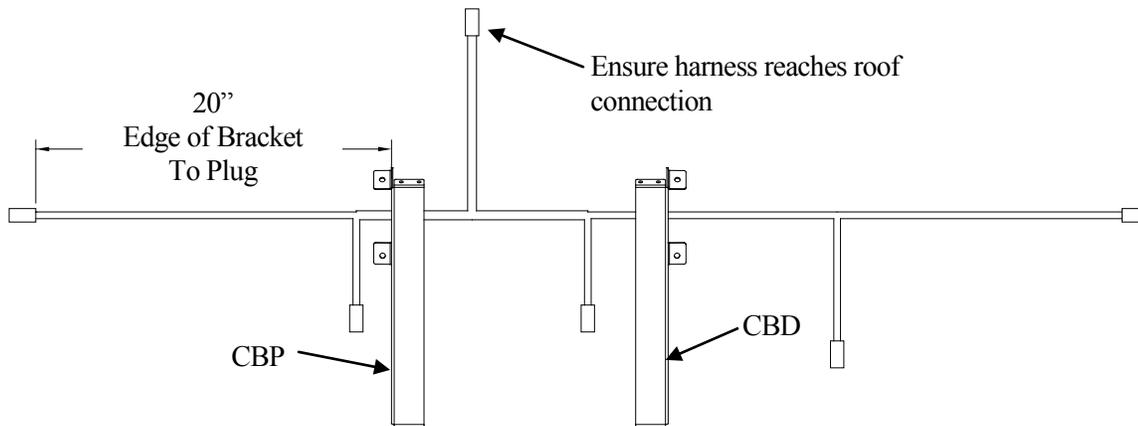

5. Fasten brackets CBD and CBP (with harness) to the roof. Do not fully tighten in order to allow movement of the brackets. Use fasteners from step 1.
6. Fasten brackets OBD and OBP to the roof. Do not fully tighten in order to allow movement of the brackets. Use fasteners from step 1.

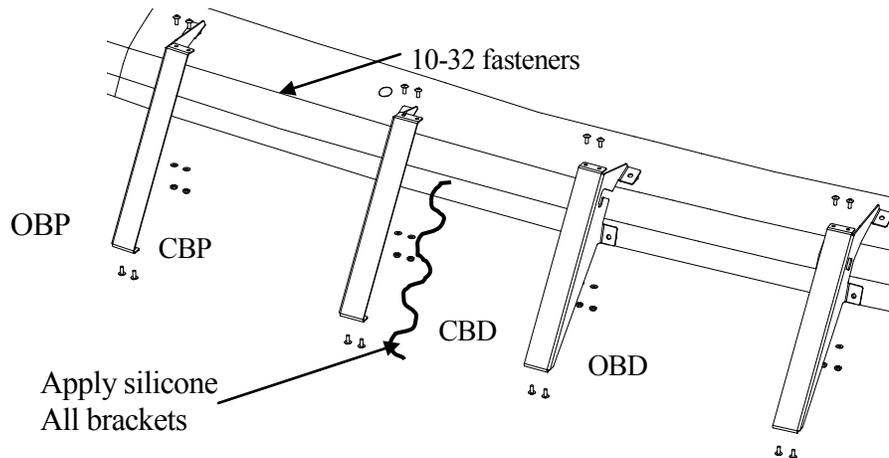

7. Apply silicone to the front face of all the brackets.
8. Set sunvisor on to the 4 brackets. 1st hook the bottom edge, then lay the visor on to the brackets. Two people are recommended for this step.

Stainless Steel Accessories

9. Fasten the sunvisor to the brackets with supplied 10-32 fasteners (16x). Do not tighten fully.
10. Fasten the sunvisor ends using supplied 5/16" fasteners (2x)
11. Fully tighten remaining fasteners.
12. Connect wiring harness to the lights. Wire clips are provided to bundle wiring.
13. Remove protective plastic and clean with glass cleaner, if required.