


## Stainless Steel Accessories

# DOOR KICK PANEL, 5700XE, WESTERN STAR

### INSTALLATION INSTRUCTIONS

1. Remove the existing kick panels from the truck and retain hardware and components.
2. Assemble the driver panel with the existing hardware and components shown in Figure 1.

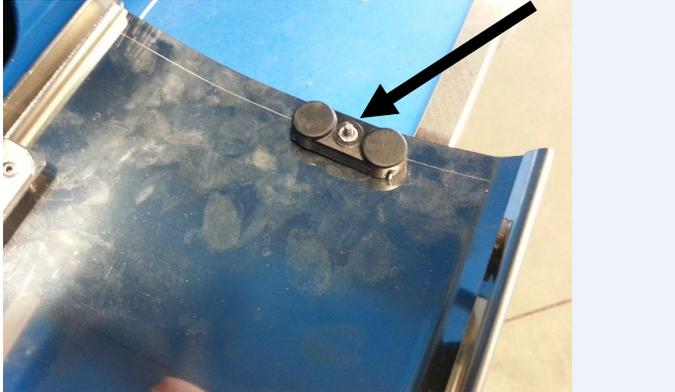

(FIGURE 1)

3. Overlap the existing bracket hinge on the new panel and fasten with hardware provided. Shown in figure 2



(FIGURE 2)

4. Passenger panel is fastened to the truck using the existing hardware.
5. Remove protective plastic and clean with glass cleaner, if necessary.